

# selec

## 600-DT (17.5mm) Operating Instructions


OP376-V01



### SPECIFICATIONS

- Supply Voltage** : 20 to 240V AC/DC (50/60Hz)  
**Time Ranges** : 99:9 Sec, 999 Sec, 9:59 M:S,  
 99:9M, 999 M, 9:59 H:M,  
 99:9 H, 999 H
- Counting Direction** : Down  
**Accuracy** : ± 0.1% of set time or ±50msec  
 (Whichever is greater)
- For Y contact operation : +100msec  
**Repeat Accuracy** : ± 0.1 %  
**Relay** : 1 C/O (SPDT)  
**Reset Time** : 100ms  
**Initiate Time** : 30ms  
**Memory Retention** : Selectable  
**Temperature** : Operating : 0 to 50°C  
 Storage : -20 to 75°C
- Humidity** : 95% RH.  
**Housing** : Flame retardant engineering plastic  
**Weight** : 70 gms


### FRONT PANEL DESCRIPTION

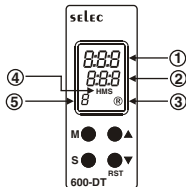

	On line	Config.	Front Reset
①	Process time	Parameter name	
②	Set time	Parameter Options	
③	Output Status ( Lit when O/P is ON )		
④	Time Range ( Blink in online Mode )		
⑤	Operating Mode		

### CONFIGURATION MODE

- Enter by pressing the key 'M' for 3 sec.
- Scroll the parameters by pressing the key 'S'
- Change the parameter value by pressing the ▲/▼ key.
- Exit config. mode by pressing the key 'M' for 3 sec. [All parameters are saved in memory when unit exits from config. mode.]

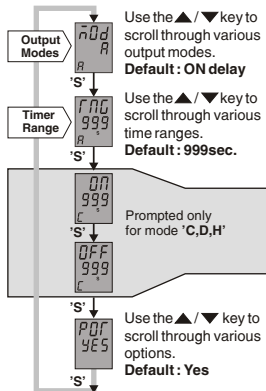

### FRONT RESET

- Enter by pressing the ▼ key for 5sec.  
 (\* The unit will auto exit reset mode after 1sec.)



### TIME SET MODE

- Enter by pressing the key 'S' for 5 sec.
- Press the key 'S' to select next digit.
- If 'S' key is pressed when cursor is at the right most position [and the parameter being set is not the last one] the next parameter is displayed. And if it is the last parameter then it exits the time set mode and all parameters are stored in memory.

