# selec

OP868-V0

#### MFM391/MFM391-CE

Operating Instructions	
selec	
	Γ

**SPECIFICATIONS** 

#### DISPLAY 3 Row of 3 Digits 7 Segment LED Display Size 36.5 x 48 mm Integrated with parameter Units WIRING INPUT 3Ø-4 wire, 3Ø-3 wire RATED INPUT VOLTAGE 11 to 300VAC (L-N); 19 to 519VAC (L-L) FREQUENCY RANGE 50/60 Hz RATED INPUT CURRENT Nominal 5A (Min-20mA, Max-6A) **CT PRIMARY** 1A/5A to 10,000A (Programmable for any value) Note: 1A to 10,000 A if CT secondary is 1 else 5A to 10,000A CT SECONDARY 1Aor 5A (programmable) PT PRIMARY 100V to 500kV (Programmable for any value) PT SECONDARY 100 to 500V (Programmable for any value)

- DISPLAY UPDATE TIME 1 sec. for all parameters
- DISPLAY SCROLLING
- Auto/Manual

#### POWER CONSUMPTION

Less than 8VA

- ENVIRONMENTAL CONDITIONS
- Indoor use

- Altitude of up to 2000 meters

- Pollution degree II
- Installation Category III Temperature : Operating : -10°C to 55°C

#### Storage :-20°C to 75°C : Up to 85% non-condensing Humidity RPM : Pole : 0 (Range : 0-98, Selectable in step 2).Frequency : 45-65Hz Run Hour : 0-99999.9 hr BURDEN : 0.5VA@5Aperphase **MOUNTING** : Panel mounting

WEIGHT

MFM391 :190gms MFM391-CE: 193gms

## **ORDER CODE INFORMATION**

Product	Supply Voltage	Certification	
Product	Supply voltage		
MFM391	85V - 270V AC,50/60Hz	_	_
MFM391-CE	85V - 270V AC,50/60Hz		—

#### ACCURACY

AUGUNAGI		
Measurement	Accuracy	
Voltage V <sub>L-N</sub>	±0.5% of F.S. ±2 digit	
Voltage V <sub>L-L</sub>	±0.5% of F.S. ±2 digit	
Current	±0.5% of F.S. ±2 digit	
Frequency	±0.1Hz ±1digit	
Run Hour	±1%	
RPM	±0.5%	
Active Power	1%	
Apparent power	1%	
Reactive Power	1%	
Power Factor	±0.01	

Parameters	Description	Unit
Voltage (True RMS)	All phase to phase, phase to neutral and average	V, kV
Current (True RMS)	All phases and average	A, kA
Frequency	Frequency of present phase	Hz
Power Factor	All phases and average	PF
Active Power	All phases and Total	k,M
Reactive Power	All phases and Total	k,M
Apparent Power	All phases and Total	k,M
Run Hour	The time for which meter is on	—
RPM	RPM calculated from system frequency	

## ▲ SAFETY PRECAUTIONS

All safety related codifications, symbols and instructions that appear in this operating manual or on the equipment must be strictly followed to ensure the safety of the operating personnel as well as the instrument.

If the equipment is not used in a manner specified by the manufacturer it might impair the protection provided by the equipment.

- Do not use the equipment if there is any mechanical damage
- · Ensure that the equipment is supplied with correct voltage.

# CAUTION :

- 1. Read complete instructions prior to installation and operation of the unit.
- 2. Risk of electric shock.
- 3. The equipment in its installed state must not come in close proximity to any heating sources, oils, steam, caustic vapors or other unwanted process by products.

#### WIRING GUIDELINES

#### WARNING :

- 1. To prevent the risk of electric shock, power supply to the equipment must be kept OFF while doing the wiring arrangement.
- 2. Wiring shall be done strictly according to the terminal layout. Confirm that all connections are correct.
- 3. Use lugged terminals.
- 4. To reduce electromagnetic interference use of wires with adequate ratings and twists of the same in equal size shall be made with shortest connections.
- 5. Layout of connecting cables shall be away from any internal EMI source.
- 6. Cable used for connection to power source, must have a cross section of 0.5mm<sup>2</sup> to 2.5mm<sup>2</sup> (20 to 14AWG; 75°C(min)). These wires shall have current carrying capacity of 6A.
- 7. Copper cable should be used (Stranded or Single core cable).
- 8. Before attempting work on device, ensure absence of voltages using appropriate voltage detection device.

#### **INSTALLATION GUIDELINES**

#### CAUTION :

- 1. This equipment, being built-in-type, normally becomes a part of main control panel and in such case the terminals do not remain accessible to the end user after installation and internal wiring.
- 2. Conductors must not come in contact with the internal circuitry of the equipment or else it may lead to a safety hazard that may in turn endanger life or cause electrical shock to the operator.
- 3. Circuit breaker or mains switch must be installed between power source and supply terminals to facilitate power 'ON' or 'OFF' function. However this switch or breaker must be installed in a convenient position normally accessible to the operator.
- 4. Before disconnecting the secondary of the external current transformer from the equipment, make sure that the current transformer is short circuited to avoid risk of electrical shock and injury.
- 5. The equipment shall not be installed in environmental conditions other than those mentioned in this manual.
- 6. The equipment does not have a built-in-type fuse. Installation of external fuse of rating 275V AC / 0.5Amp for electrical circuitry / battery is highly recommended.

Config page.	Function	Range or Selection	Factory Setting
1	Network Selection	3P4W / 3P3W	3P4W
2	CT Secondary	1A or 5A	5
3	CT Primary	5A to 10,000A if CT Secondary is 5A 1A to 10,000A if CT Secondary is 1A	005
4	PT primary	100V to 500kV	350
5	PT Secondary	100V to 500V	350
6	No. of poles	0 to 98 (Selectable in step 2)	02
7	Reset Run Hour	Yes/No	No

# MECHANICAL INSTALLATION

#### For installing the meter

- 1. Prepare the panel cutout with proper dimensions as shown below.
- 2. Push the meter into the panel cutout. Secure the meter in its place by fitting the clamp on the rear side. fit clamps on both sides in diagonally opposite location for optimum fitting.
- 3. For proper sealing, tighten the screws evenly with required torque. Terminal screw tightening torque : 0.5N.m4.4Lb.in



#### MAINTENANCE

- 1. The equipment should be cleaned regularly to avoid blockage of ventilating parts.
- 2. Clean the equipment with a clean dry or damp cloth. Do not use any cleaning agent other than water.



#### FRONT PANEL DESCRIPTION



#### ONLINE PAGE DESCRIPTION

There are two dedicated keys labelled as  $\blacktriangle$  and  $\triangleright$ . Use these 2 keys to read parameters. Simply press these keys to read the parameters. Units of corresponding parameters on display will glow automatically.

Key 1 (A /PG): To Increment Main Page.

2) Key 2 ( > /A/M ) : To Increment subpages of respective Main Page

96 x 96

KEY PRESSONLINE PAGE DESCRIPTIONPress "A"1st screenDisplays three phase line to neutral voltage.Press ">"2nd screenDisplays three phase line to line voltage.Press ">"2nd screenDisplays three phase line to neutral current.Press ">"2nd screenDisplays three phase line to neutral current.Press ">"2nd screenDisplays RPM.Press ">"3rd screenDisplays three phase average line to neutral voltage, current and power factor.Press ">"2nd screenDisplays three phase average line to neutral voltage, current and power factor.Press ">"3rd screenDisplays three phase average line to neutral voltage, current and power factor.Press ">"3rd screenDisplays first phase line to neutral voltage, current and power factor.Press ">"3rd screenDisplays second phase line to neutral voltage, current and power factor.Press ">"5th screenDisplays three phase total active power, reactive power and apparent power.Press ">"3rd screenDisplays three phase total active power, reactive power and apparent power.Press ">"3rd screenDisplays first phase active power, reactive power and apparent power.Press ">"3rd screenDisplays first phase active power, reactive power and apparent power.Press ">"3rd screenDisplays first phase active power, reactive power and apparent power.<	For 3P4W		
"A"Ist screento neutral voltage.Press ">"2nd screenDisplays three phase line to line voltage.Press "A"1st screenDisplays three phase line to neutral current.Press ">"2nd screenDisplays RPM.Press ">"3rd screenDisplays Run Hour.Press ">"3rd screenDisplays Run Hour.Press ">"3rd screenDisplays three phase average line to neutral voltage, current and power factor.Press ">"2nd screenDisplays three phase average line to neutral voltage, current and power factor.Press ">"3rd screenDisplays three phase line to neutral voltage, current and power factor.Press ">"3rd screenDisplays first phase line to neutral voltage , current and power factor.Press ">"3rd screenDisplays second phase line to neutral voltage , current and power factor.Press ">"2th screenDisplays third phase line to neutral voltage , current and power factor.Press ">"2nd screenDisplays third phase active power and apparent power.Press ">"2nd StreenDisplays first phase active power, reactive power and apparent power.Press ">"2nd StreenDisplays first phase active power, reactive power and apparent power.Press ">"2nd StreenDisplays first phase active power, reactive power and apparent power.			ONLINE PAGE DESCRIPTION
"*"screento line voltage.Press "A"1st screenDisplays three phase line to neutral current.Press ">"2nd screenDisplays RPM.Press ">"3rd screenDisplays Run Hour.Press ">"3rd screenDisplays three phase average line to neutral voltage, current and power factor.Press ">"2nd screenDisplays three phase average line to neutral voltage, current and power factor.Press ">"2nd screenDisplays three phase average line to neutral voltage, current and power factor.Press ">"3rd screenDisplays first phase line to neutral voltage , current and power factor.Press ">"3rd screenDisplays second phase line to neutral voltage , current and power factor.Press ">"5th screenDisplays three phase active power and apparent power.Press ">"2nd screenDisplays three phase total active power, reactive power and apparent power.Press ">"2nd StreenDisplays first phase active power, reactive power and apparent power.Press ">"3rd screenDisplays first phase active power, reactive power and apparent power.Press ">"3rd screenDisplays first phase active power, reactive power and apparent power.Press ">"3rd screenDisplays first phase active power, reactive power and apparent power.			
"A"screento neutral current.Press ">"2nd screenDisplays RPM.Press ">"3rd screenDisplays Run Hour.Press "A"1st screenDisplays three phase average line to neutral voltage, current and power factor.Press ">"2nd screenDisplays three phase average line to neutral voltage, current and power factor.Press ">"2nd screenDisplays three phase average line to neutral voltage, current and power factor.Press ">"3rd screenDisplays first phase line to neutral voltage , current and power factor.Press ">"3rd screenDisplays second phase line to neutral voltage , current and power factor.Press ">"5th screenDisplays third phase line to neutral voltage , current and power factor.Press ">"2nd screenDisplays third phase line to neutral voltage , current and power factor.Press ">"2nd screenDisplays three phase total active power, reactive power and apparent power.Press ">"2nd screenDisplays first phase active power, reactive power and apparent power.Press ">"3rd screenDisplays second phase active power and apparent power.			
""Displays HPM.Press ">"3rd screenDisplays Run Hour.Press ">"3rd screenDisplays Run Hour.Press ">"1st screenDisplays three phase average line to neutral voltage, current and power factor.Press ">"2nd screenDisplays three phase average line to line voltage, current and power factor.Press ">"3rd screenDisplays three phase average line to line voltage, current and power factor.Press ">"3rd screenDisplays first phase line to neutral voltage , current and power factor.Press ">"5th screenDisplays second phase line to neutral voltage , current and power factor.Press ">"5th screenDisplays third phase line to neutral voltage , current and power factor.Press ">"2nd screenDisplays third phase line to neutral voltage , current and power factor.Press ">"2nd screenDisplays three phase total active power, reactive power and apparent power.Press ">"2nd screenDisplays first phase active power, reactive power and apparent power.Press ">"3rd screenDisplays second phase active power and apparent power.			
<ul> <li>"&gt;" screen</li> <li>Displays Run Hour.</li> <li>Press</li> <li>"A"</li> <li>1st screen</li> <li>Displays three phase average line to neutral voltage, current and power factor.</li> <li>Press</li> <li>3rd screen</li> <li>Displays three phase average line to line voltage, current and frequency.</li> <li>Press</li> <li>3rd screen</li> <li>Displays first phase line to neutral voltage, current and power factor.</li> <li>Displays first phase line to neutral voltage, current and power factor.</li> <li>Press</li> <li>5th screen</li> <li>Displays second phase line to neutral voltage, current and power factor.</li> <li>Press</li> <li>5th screen</li> <li>Displays third phase line to neutral voltage, current and power factor.</li> <li>Press</li> <li>1st screen</li> <li>Displays three phase total active power, reactive power and apparent power.</li> <li>Press</li> <li>2nd screen</li> <li>Displays first phase active power, reactive power and apparent power.</li> <li>Displays second phase</li> <li>Displays second phase</li> <li>Displays first phase active power, reactive power and apparent power.</li> </ul>		2.10	Displays RPM.
Press " A""1st screento neutral voltage, current and power factor.Press " Displays three phase average line to line voltage, current and frequency.Displays three phase average line to line voltage, current and frequency.Press " Displays first phase line to neutral voltage , current and power factor.Displays first phase line to neutral voltage , current and power factor.Press " Displays second phase line to neutral voltage , current and power factor.Displays second phase line to neutral voltage , current and power factor.Press " Displays third phase line to neutral voltage , current and power factor.Displays third phase line to neutral voltage , current and power factor.Press " A"1st screenDisplays three phase total active power, reactive power and apparent power.Press " Displays sitre phase active power screenDisplays second phase active power and apparent power.Press " Displays second phase active power, reactive power and active power and active power and active power and active power and			Displays Run Hour.
Press ">"2nd screento line voltage, current and frequency.Press ">"3rd screenDisplays first phase line to neutral voltage, current and power factor.Press ">"4th screenDisplays second phase line to neutral voltage, current and power factor.Press ">"5th screenDisplays second phase line to neutral voltage, current and power factor.Press ">"5th screenDisplays third phase line to neutral voltage, current and power factor.Press "A"1st screenDisplays third phase active power and apparent power.Press ">"2nd screenDisplays first phase active power, reactive power and apparent power.Press ">"3rd screenDisplays second phase active power, reactive power and active power active power and active power, reactive power and active power, reactive power and active power active power and active power, reactive power and			to neutral voltage, current and
Press ">"3rd screento neutral voltage , current and power factor.Press ">"4th screenDisplays second phase line to neutral voltage , current and power factor.Press ">"5th screenDisplays third phase line to neutral voltage , current and power factor.Press ">"5th screenDisplays third phase line to neutral voltage , current and power factor.Press "^"2nd screenDisplays three phase total active power, reactive power and apparent power.Press ">"2nd screenDisplays first phase active power, reactive power and apparent power.Press ">"3rd ecrroonDisplays second phase active power, reactive power and active power active power and active power and active power and active power active power and			to line voltage, current and
Press       4th screen       to neutral voltage, current and power factor.         Press       5th screen       Displays third phase line to neutral voltage, current and power factor.         Press       1st screen       Displays three phase total active power, reactive power and apparent power.         Press       2nd screen       Displays first phase active power, reactive power and apparent power.         Press       3rd screen       Displays second phase active power, reactive power and			to neutral voltage , current and
Press     Streen     to neutral voltage , current and power factor.       Press     1st screen     Displays three phase total active power, reactive power and apparent power.       Press     2nd screen     Displays first phase active power, reactive power and apparent power.       Press     3rd screen     Displays second phase active power and active power.       Press     3rd screen     Displays second phase active power and active power.			to neutral voltage, current and
Press     Ist screen     power, reactive power and apparent power.       Press     2nd screen     Displays first phase active power, reactive power and apparent power.       Press     3rd screen     Displays second phase active power and apparent power.			to neutral voltage , current and
Press     3rd     Displays second phase active power, reactive power and			power, reactive power and
"" active power, reactive power and			reactive power and apparent
Press "▶"4th screenDisplays third phase active power, reactive power and apparent power.			reactive power and apparent

For 3P3W		
KEY PRESS	ONLINE PAGE DESCRIPTION	
Press "▲"	1st screen	Display three phase line to line voltage.
Press "▲"	1st screen	Displays three phase line to line current.
Press "▶"	2nd screen	Displays RPM.
Press "▶"	3rd screen	Displays Run Hour.
Press "▲"	1st screen	Displays three phase average line to line voltage, current and frequency.

For 3P3W		
KEY PRESS		ONLINE PAGE DESCRIPTION
Press "▶"	2nd screen	Displays first phase line to line voltage , current and three phase average power factor.
Press "▶"	3rd screen	Displays second phase line to line voltage , current and three phase average power factor.
Press "▶"	4th screen	Displays third phase line to line voltage , current and three phase average power factor.
Press "▲"	1st screen	Displays three phase total active power, reactive power, apparent power.
SERIAL	NUMBER D	DESCRIPTION
		sec to display serial number
AUTOM	ATIC / MAN	UAL / DEFAULT MODE
Press >		ec to toggle between AUTOMATIC /
	URATION	
		on setting mode :
	key for ration menu	3 sec to enter and exit from
		n. ment the configuration pages .
-		he value and shift the cursor for next
digit to e • Use ▶ k		save the parameter value .
Press	key for nex	t page.
		2 second to set CT/PT primary values in vice versa.
Eg:- If use	er want to s	et 1300 = first
		d key <b>▲</b> for 2 sec to shift in k, then 0k ,press ➤ shift the cursor for next digit
		change values after the decimal point
		key for 2 sec to save the parameters ,
it will show	w 1.30k. L WIRING I	
		Commonly Used)
	wire, 3 CT rk Selectio	
MFM391/MFM391-CE-RoHS		
I1 I2 I3		
ା 12 13 S1 S2 S1 S2 S1 S2 N V1 V2 V3 ଡ଼ି ଡ଼ି ଡ଼ି ଡ଼ି ଡ଼ି ଡ଼ି ଡ଼ି ଡ଼ି ଡ଼ି		
	LINE	L1 LOAD



٢

LOAD

- L1

LOAD