

selec**MV35-1**
Operating Instructions

96 x 96mm

SPECIFICATIONS

| | |
|---------------------------------|--|
| Description | : 1 \emptyset Digital Voltmeter |
| Display | : 4 Digit 7 Segment LED Display |
| Rated Input Voltage | : 11 - 300V AC(L-N) 19 - 516V AC(L-L) |
| Frequency Range | : 50/60 Hz |
| Max Continuous I/P Range | : 120% of Rated I/P Voltage |
| Over Range Indication | : "Or" for input > 516V(L-L) "Or" for input > 300V(L-N) |
| Impedance | : 1M Ω (\pm 5%) |
| PT Primary | : 100V - 999kV |
| PT Secondary | : 100V - 500V (Programmable to any value) |
| Resolution | : Auto Resolution |
| Accuracy | : \pm 0.5% of Full Scale |
| Measuring Method | : True RMS |
| Display Update Time | : 1 sec. |

| | |
|---------------------------------|----------------------------|
| Power Consumption | : Less than 5VA |
| Auxiliary Supply Voltage | : 40-300V AC/DC,50/60Hz |
| Weight | : 155gms |
| Mounting | : Panel mounting |
| Environmental Conditions | |
| Operating Temperature | : -10°C to 55°C |
| Operating Storage | : -20°C to 75°C |
| Relative Humidity | : Upto 85%(non-condensing) |
| Pollution Degree | : II |

ORDER CODE INFORMATION

| Product | Supply Range | Certification |
|---------------------|------------------------|---------------|
| MV35-1-G-40/300V-CE | 40-300V AC/DC, 50/60Hz | ✓ |
| MV35-1-G-40/300V | 40-300V AC/DC, 50/60Hz | |

SAFETY PRECAUTIONS

All safety related codifications, symbols and instructions that appear in this operating manual or on the equipment must be strictly followed to ensure the safety of the operating personnel as well as the instrument.

If the equipment is not used in a manner specified by the manufacturer it might impair the protection provided by the equipment.

- Do not use the equipment if there is any mechanical damage.
- Ensure that the equipment is supplied with correct voltage.

⚠ CAUTION :

1. Read complete instructions prior to installation and operation of the unit.
2. Risk of electric shock.
3. The equipment in its installed state must not come in close proximity to any heating sources, caustic vapors, oils, steam or other unwanted process by products.

CONFIGURATION


- Use **>** + **▲** key to enter & exit from configuration menu, for 3 sec.
- Use **▲** key to go to next parameter.
- Use **>** key to edit the parameter & press same key for 2 sec. to save parameter.
- Use **▲** key to increment parameter value.
- To set the value of PT primary in kV, First edit the value and then press **▲** key for 3 sec., Display will shift to kV with resolution 000.0kV & this process is same, to set the value of PT primary in V.

| Config page. | Function | Range or Selection | Factory Setting |
|--------------|--------------|--------------------|-----------------|
| 1 | PT Primary | 100-999kV | 350 |
| 2 | PT Secondary | 100-500V | 350 |

SERIAL NUMBER DESCRIPTION

Press **▲** key for 10 sec. to display 8 digit serial number only for 3 sec. in two windows.

WIRING DIAGRAM WITH TERMINAL CONNECTION

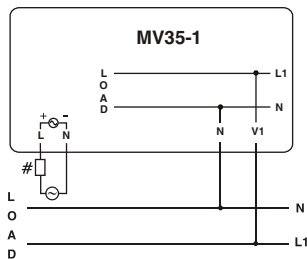

All fuse types : 0.5A class CC UL type ;
0.5A fast acting 600V

(Specifications are subject to change, since development is a continuous process.)

Selec Controls Pvt. Ltd., India

Factory Address :

EL-27/1, Electronic Zone, TTC Industrial Area,
MIDC, Mahape, Navi Mumbai - 400 710, INDIA.

Tel. No. : +91-22-41 418 468/41 418 452

Fax No. : +91-22-28471733 | Toll free : 1800 227 353

Website : www.selec.com | Email : sales@selec.com