

**selec****MA335**

Operating Instructions

OP472-V01



96 x 96mm

**SPECIFICATIONS**

<b>Description</b>	: 3 Ø Digital ammeter
<b>Display</b>	: 4 Digit 7 segment LED Display
<b>Wiring input</b>	: 3 Ø 4 W, 3 Ø 3 W, 1 Ø 2 W
<b>Rated input current</b>	: 50mA to 6A
<b>Max continuous input range</b>	: 6.2A
<b>Over range indication</b>	: "Or" for input > 6.2A
<b>CT Primary</b>	: 1-999,0kA
<b>CT Secondary</b>	: 1 or 5
<b>Resolution</b>	: Auto resolution depend upon CT ratio
<b>Accuracy</b>	: ±0.5% of full Range
<b>Measuring Method</b>	: True RMS
<b>Display Update Time</b>	: 1sec.
<b>Power Consumption</b>	: Less than 5VA
<b>Supply Voltage</b>	: 230V AC(±20%), 50/60Hz

<b>Weight</b>	: 200gms
<b>Mounting</b>	: Panel mounting
<b>Environmental Conditions</b>	
Operating Temperature	: 0°C to 50°C
Operating Storage	: -25°C to 70°C
Relative Humidity	: 0-90% (non-condensing)
Pollution degree	: II

**SAFETY PRECAUTIONS**

All safety related codifications, symbols and instructions that appear in this operating manual or on the equipment must be strictly followed to ensure the safety of the operating personnel as well as the instrument.

If the equipment is not used in a manner specified by the manufacturer it might impair the protection provided by the equipment.

- Do not use the equipment if there is any mechanical damage.
- Ensure that the equipment is supplied with correct voltage.

**⚠ CAUTION :**

1. Read complete instructions prior to installation and operation of the unit.
2. Risk of electric shock.
3. The equipment in its installed state must not come in close proximity to any heating sources, caustic vapors, oils, steam, or other unwanted process by products.

**TERMINAL CONNECTIONS****AUTO MANUAL DESCRIPTION**

Press **▷** key for 3sec. to switch in auto and manual mode.

## CONFIGURATION

- Use  $\triangleright$  +  $\Delta$  key to enter & exit from configuration menu, for 3 sec.
- Use  $\Delta$  key to go to next parameter.
- Use  $\triangleright$  key to edit the parameter & press same key for 2 sec. to save parameter.
- Use  $\Delta$  key to increment parameter value.
- To set the value of CT primary in kA, First edit the value and then press  $\Delta$  key for 3 sec., Display will shift to kA with resolution 000.0kA & this process is same, to set the value of CT primary in A.

Config. page.	Function	Range or Selection	Factory Setting
1	Network Selection	3Ø4W, 3Ø3W, 1Ø2W-R, 1Ø2W-Y, 1Ø2W-B	3P4W
2	CT Primary	1-999.0kA	5
3	CT Secondary	1 or 5	5


## ONLINE PAGE DESCRIPTION

	KEY PRESS	DESCRIPTION
Press Key ( $\triangleright$ )	—	Displays 1 <sup>st</sup> phases Current
	1 <sup>st</sup> time	Displays 2 <sup>nd</sup> phases Current
	2 <sup>nd</sup> time	Displays 3 <sup>rd</sup> phases Current
	3 <sup>rd</sup> time	Displays average current of three phases.

## SERIAL NUMBER DESCRIPTION

Press  $\Delta$  key for 10sec. to display 8 digit serial number for 3sec. in two windows

## WIRING DIAGRAM

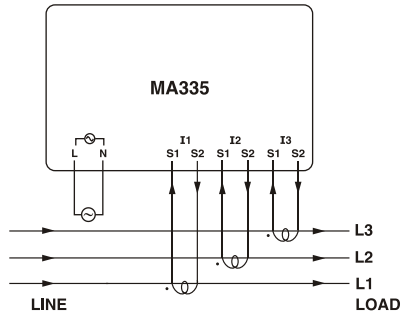

(Specifications subject to change as development is a continuous process.)

## Selec Controls Pvt. Ltd., India

Factory Address :

EL-27/1, Electronic Zone, TTC Industrial Area, MIDC, Mahape,  
Navi Mumbai - 400 710, INDIA.

Tel. No. : +91-22-41 418 419/430 I Fax No. : +91-22-28471733

Toll free : 1800 227 353 (BSNL/MTNL Subscribers only)

Website : [www.selec.com](http://www.selec.com) I Email : [sales@selec.com](mailto:sales@selec.com)