

**selec****LXC900A / LT920A (C/V)**

Operating Instructions

**LT920A****LXC900A**

24x48mm

**SPECIFICATIONS****LCD COUNTER**

- Display** : LCD, 7 1/2 digit, ht 8.0mm  
**Battery Life** : 8 Years  
**Speed Selection** : (Only for LXC900A-C)  
 1) 100Hz (Default) 2) 14Hz  
**Range Selection** : (Only for LT920A-C/V)  
 1) 199999.99hrs (default)  
 2) 1999:59:59 (HHMM.MM.SS)

**Signal Input**

- LXC/LT-C : Potential free contact  
 LXC/LT-V : 24-260 V AC/DC

**Counting Direction**

Up

**DIP Switch**

- S1: Unit ON/OFF  
 S2: Front Key Enable/Disable

**Reset Input :**

- 1) Terminal Reset :  
 LXC900A-C : Short terminals 3 & 4  
 LXC900A-V : Short terminals 4 & 5  
 LT920A-C : Short terminals 3 & 4  
 LT920A-V : Short terminal 3 & 4  
 2) Front Reset:  
 ON DIP Switch S2 press front key momentarily

**Housing**

: Flame retardant plastic

**Mounting**

: Panel mounting

**Temperature**

: Operating : 0 to 50°C

Storage : -20 to 75°C

**Humidity**

: 95% RH

**Weight**

: approx. 60gms

 
 
 
**Please maintain these instructions and review****them before using the unit :****Safety Information****⚠ Caution**

1. This unit is intended for outdoor use.
2. Avoid inflow of dust and contact of conductive material with the internal circuitry of the unit.
3. The unit must not operate in presence of heating sources, caustic vapors, oil, steam, vibration or impact etc.
4. Clean the equipment with a clean soft cloth. Do not use any organic cleaning agent.

 
 
 
**Installation suggestion**

For a good industrial environment, where there is a low "noise" level there is little danger of interference. However, it is necessary to take the following precautions to have proper operation of the unit.

1. Input cable : The connection between the unit and the input device should be made via a 2 core screen cable.
2. The screen must be earthed at only one point, but that point can be at either one or the other end of the cable.
3. The input circuit should not be interrupted by the contacts of the contactor, if such contacts need to be used then contactor and relay suppression is essential.
4. If the length of the cable exceeds upto 5m, it would be necessary to use a local relay and command that relay from a distance.

**DIMENSIONS (in mm)****Panel Cutout :****TERMINAL CONNECTIONS****LXC900A-C** : To turn on short terminal 1 & 2.**Speed selection in LXC900A-C**

|                 |                       |
|-----------------|-----------------------|
| 14Hz            | Short terminal 4 & 5  |
| 100Hz (default) | Remove Shorting 4 & 5 |

**LXC900A-V** : To turn on give input signal.**LT920A-C** : To turn on short terminal 1 & 2.**LT920A-V** : To turn on give input signal.**Range Selection using F.R (Front reset key) & terminals**

|                  |                               |
|------------------|-------------------------------|
| Front key enable | S2 ON                         |
| HHMM.MM.SS       | Short 4 & 5 and press F.R     |
| HOURS (default)  | Keep 4 & 5 open and press F.R |

**To turn off the LCD, S2 ON and press key for 7sec**

(Specifications subject to change as development is a continuous process.)

**Selec Controls Pvt. Ltd., India****Factory Address :**

EL-27/1, Electronic Zone, TTC Industrial Area,  
 MIDC, Mahape, Navi Mumbai - 400 710, INDIA.  
 Tel. No. : +91-22-28476443 / 1882  
 Fax No. : +91-22-28471733 | Toll free : 1800 227 353  
 Website: www.selec.com | Email: sales@selec.com

Disclaimer : \*This product is strictly for industrial use and for sale in non European countries only\*