

**selec**TC544A / TC244AX / TC344AX /  
DTC204A-2 / DTC324A-2

Operating Instructions

**SPECIFICATIONS****Display**

- 4 + 4 digit, 7 segment digital display
- 4 digit for DTC204A-2 / DTC324A-2

**LED Indications**

- 1 : Output 1 ON
- 2 : Output 2 ON
- T : Auto tune
- S : Dwell timer\* (Applicable for TCX44A/AX)

**Keys**

- 3 keys for digital setting

**INPUT SPECIFICATIONS****Input Signal**

Thermocouple (J,K,L,T,R,S) / RTD (Pt100)

**Sampling time**

250 ms

**Input Filter (FTC)**

0.2 to 10.0 sec

**Resolution**

0.1/1° for TC/RTD input (Fixed 1° for R &amp; S type TC input)

**Temperature Unit**

°C / °F selectable

**Indication Accuracy**

- For TC inputs : 0.25% of F.S ± 1°
- For R & S inputs : 0.5% of F.S ± 2° (20 min of warm up time for TC input)
- For RTD inputs : 0.1% of F.S ± 1° (F.S = Full Scale)

**FUNCTIONAL SPECIFICATIONS****Control Method**

- PID control with auto tuning
- ON-OFF control
- Heat-Cool (with auto-tuning)

**Proportional Band (P)**

1.0 to 400.0°

**Integral Time (I)**

0 to 9999 sec

**Derivative Time (D)**

0 to 9999 sec

**Cycle Time**

0.1 to 99.9 sec

**Hysteresis Width**

0.1 to 99.9°

**Dwell Timer**

0 to 9999 min (only for TCX44A/AX)

**Manual Reset Value**

-19.9 to 19.9°

**HEAT COOLPID****Control Method**

PID

**Proportional Band-Cool**

0.0 to 400.0°

**Cycle Time-Cool**

0.1 to 99.9 sec.

**Dead Band**

SPLL to SPHL (Programmable)

**OUTPUT****Control Output (Relay or SSR user selectable) :****Relay Contact (SPDT)**

05 A resistive @ 250V AC / 30V DC (TC544A : SPST RLY)

10 A resistive\* @ 250V AC / 30V DC

(\*For DTC204A-2 / DTC324A-2)

**SSR Drive Output (Voltage Pulse)**

12V DC, 50 mA

**Auxiliary Output :****Relay Contact (SPDT)**

05 A resistive @ 250V AC / 30V DC (TC544A : SPST RLY)

**SSR Drive Output (Voltage Pulse)**

12V DC, 50 mA

**POWER SUPPLY****Supply Voltage**

85 to 270V AC/DC (AC : 50 or 60 Hz)

Optional - 24V AC/DC

**Power Consumption**

6 VA max @ 230V AC

**Temperature**

Operating : 0 to 50°C

Storage : -20 to 75°C

**Humidity (non-condensing)**

95% RH

**Weight**

TC544A : 142 gms

TC244AX / DTC204A-2 : 200 gms

TC344AX / DTC324A-2 : 252 gms

**SAFETY PRECAUTIONS**

All safety related codifications, symbols and instructions that appear in this operating manual or on the equipment must be strictly followed to ensure the safety of the operating personnel as well as the instrument.

If the equipment is not handled in a manner specified by the manufacturer it might impair the protection provided by the equipment.

Read complete instructions prior to installation and operation of the unit.

**WARNING :** Risk of electric shock.

**WIRING GUIDELINES****WARNING :**

- To prevent the risk of electric shock power supply to the equipment must be kept OFF while doing the wiring arrangement. Do not touch the terminals while power is being supplied.
- To eliminate electromagnetic interference use short wire with adequate ratings; twists of the same in equal size shall be made. For the input and output signal lines, be sure to use shielded wires and keep them away from each other.
- Cable used for connection to power source, must have a cross section of 1mm<sup>2</sup> or greater. These wires shall have insulation capacity made of at least 1.5kV.
- When extending the thermocouple lead wires, always use thermocouple compensation wires for wiring. For the RTD type, use a wiring material with a small lead resistance (5Ω max per line) and no resistance differentials among three wires.
- A better anti-noise effect can be expected by using standard power supply cable for the instrument.

**MAINTENANCE**

- The equipment should be cleaned regularly to avoid blockage of ventilating parts.
- Clean the equipment with a clean soft cloth. Do not use Isopropyl alcohol or any other cleaning agent.

**INSTALLATION GUIDELINES**

- This equipment, being built-in-type, normally becomes a part of main control panel and in such case the terminals do not remain accessible to the end user after installation and Internal wiring.
- Do not allow pieces of metal, wire clippings, or fine metallic fillings from installation to enter the product or else it may lead to a safety hazard that may in turn endanger life or cause electrical shock to the operator.
- Circuit breaker or mains switch must be installed between power source and supply terminals to facilitate power 'ON' or 'OFF' function. However this switch or breaker must be installed in a convenient position normally accessible to the operator.
- Use and store the temperature controller within the specified ambient temperature and humidity ranges as mentioned in this manual.

**CAUTION**

- When powering up for the first time, disconnect the output connections.
- Fuse Protection : The unit is normally supplied without a power switch and fuses. Make wiring so that the fuse is placed between the mains power supply switch and the controller. (2 pole breaker fuse - rating : 275V AC, 1A for electrical circuitry is highly recommended)
- Since this is a built-in-type equipment (finds place in main control panel), its output terminals get connected to host equipment. Such equipment shall also comply with basic EM/EMC and other safety requirements like BSEN61326-1 and BSEN 61010 respectively.
- Thermal dissipation of equipment is met through ventilation holes provided on chassis of equipment. Such ventilation holes shall not be obstructed else it can lead to a safety hazard.
- The output terminals shall be strictly loaded to the manufacturer specified values / range.

**MECHANICAL INSTALLATION**

MODELS	DIM	Outline Dimensions				Panel Cutout		
		A	B	C	D	E	F	G
TC544A		52	52	94	45	4	46	46
TC244AX / DTC204A-2		72	72	83.7	67	4.5	69	69
TC344AX / DTC324A-2		96	96	73	90.5	5	92	92

- Prepare the panel cutout with proper dimensions as shown above.
- Fit the unit into the panel with the help of clamp given.
- The equipment in its installed state must not come in close proximity to any heating sources, caustic vapors, oils, steam, or other unwanted process by-products.



- Use the specified size of crimp terminals (M3.5 screws) to wire the terminal block. Tighten the screws on the terminal block using the tightening torque within the range of 1.2 N.m.
- Do not connect anything to unused terminals.

**EMC GUIDELINES**

- Use proper input power cables with shortest connections and twisted type.
- Layout of connecting cables shall be away from any internal EMI source.

**LOAD CONNECTIONS**


- The service life of the output relays depends on the switching capacity and switching conditions. Consider the actual application conditions and use the product within the rated load and electrical service life.
- Although the relay output is rated at 5/10 amps it is always necessary to use an interposing relay or contactor that will switch the load. This avoids damage to the controller in the event of a fault short developing on the power output circuit.
- Always use a separate fused supply for the "power load circuit" and do not take this from the live and neutral terminals supplying power to the controller.

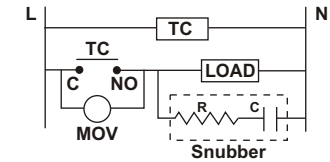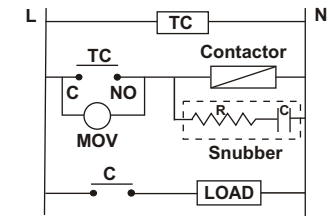**For load current less than 0.5A****For bigger loads, use interposing relay / contactor****ELECTRICAL PRECAUTIONS DURING USE**

Electrical noise generated by switching of inductive loads can create momentary disruption, erratic display, latch up, data loss or permanent damage to the instrument.


**To reduce noise:**

- Use of snubber circuits across loads as shown above, is recommended.
- Use separate shielded wires for inputs.

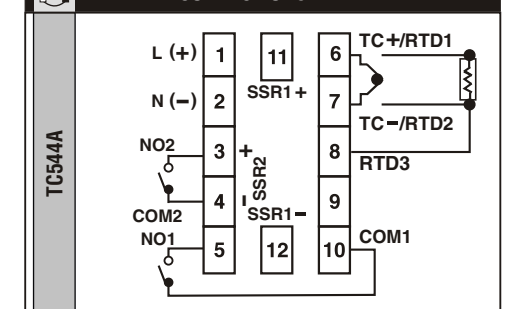**TERMINAL CONNECTIONS**


## TERMINAL CONNECTIONS

TC244AX / DTC204A-2

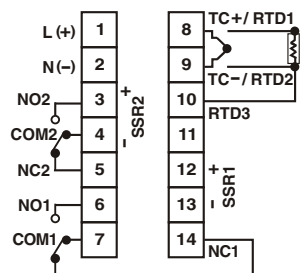

\* SSR2 Not applicable for DTC204A-2


TC344AX / DTC324A-2

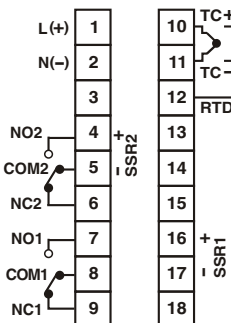

\* SSR2 Not applicable for DTC324A-2

Use only the correct thermocouple wire or compensating cable from the probe to instrument terminals avoiding joints in the cable if possible. Failure to use the correct wire type will lead to inaccurate readings. Ensure that the input sensor connected at the terminals and the input type set in the temperature controller configuration are the same.

## FRONT PANEL DESCRIPTION

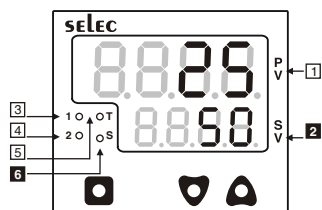

1	Process-value (PV) / Parameter name display	1) Displays a process value (PV). 2) Displays the parameter symbols at configuration mode/online menu. 3) Displays PV error conditions. (refer Table 2 on page 2)
2	Parameter setting display	1) Displays the parameter settings at configuration mode/online menu. (Not applicable for DTC204A-2 / DTC324A-2)
3	Control output 1 indication	The LED is lit when the control output 1 is ON
4	Control output 2 indication	The LED is lit when the control output 2 is ON
5	Tune	Auto tune : Blinking
6	Dwell timer	Blinking : Dwell timer is in progress. Continuous ON : Time over. (Not applicable for DTC204A-2 / DTC324A-2)

## FRONT KEYS DESCRIPTION

FUNCTIONS	KEY PRESS
<b>ONLINE</b>	
To view Level 1	Press  key for 3 sec.
To view Level 2	Press  key for 3 sec.
To view Protection Level	Press  +  keys for 3 sec.
<b>TCX44A/AX</b>	
To view online parameters	Lower display selectable between SET1/SET2/TIME using  key.
<b>NOTE</b> : Elapsed time / Remaining time dependent on the selection of ONL parameter in level1. (Not applicable for DTC204A-2 / DTC324A-2)	
<b>DTC204A-2 / DTC324A-2</b>	
To view online parameters	Display selectable between SET 1/ SET 2 using  key. <b>Note</b> : Display shows parameter SET 1 / SET 2 for 1 sec.
To change online parameter values	Press  +  /  to change parameter value.
<b>PROGRAMMING MODE</b>	
To view parameters on the same level.	or  key once to view the next or previous function in operational menu.
To increase or decrease the value of a particular parameter.	+  to increase and  +  to decrease the function value. <b>Note</b> : Parameter value will not alter when respective level is locked.
<b>NOTE</b> : The unit will auto exit programming mode after 30 sec. of inactivity. <b>OR</b> By pressing the  or  or  +  keys for 3 sec.	

## INPUT RANGES (Table 1)

FOR RTD			
INPUT	RANGES		
<b>Resolution</b>	1	0.1	
<b>Pt100</b>	°C	-150 to 850	-150 to 850
	°F	-238 to 1562	-199 to 999

FOR THERMOCOUPLE			
INPUT	RANGES		
<b>Resolution</b>	1	0.1	
<b>J</b>	°C	-199 to 750	-199 to 750
	°F	-328 to 1382	-199 to 999
<b>K</b>	°C	-199 to 1350	-199 to 999
	°F	-328 to 2462	-199 to 999
<b>T</b>	°C	-199 to 400	-199 to 400
	°F	-328 to 750	-199 to 750
<b>R &amp; S</b>	°C	0 to 1750	N/A
	°F	32 to 3182	N/A

## ERROR DISPLAY (Table 2)

When an error has occurred, the upper display indicates error codes as given below.			
Error	Meaning	Control Output Status	
S.b 0	Sensor break / over range condition	OFF	
S.0 E	Sensor reverse / under range condition	OFF	

## TCX44A/AX

### Programming online parameters

Setpoint 1	Default : 50
Range : SPLL to SPHL	
If upper display is selected as 5 E t ! then, Pressing  key will show on Upper display : 5 E t ! Lower display : <50>	
Press  +  /  keys to increment / decrement 5 E t ! value.	



Setpoint 2 / Dead band	Default : 0
Range : SPLL to SPHL	
If upper display is selected as 5 E t 2 / d b then, Pressing  key will show on Upper display : 5 E t 2 / d b Lower display : <0>	
Press  +  /  keys to increment / decrement 5 E t 2 / d b value.	



Dwell Timer	Default : OFF
Range : OFF, 1 to 9999 min	
If upper display is selected as t . 0 E n / t . E L P then, Pressing  key will show on Upper display : t ! n E Lower display : <OFF>	
Press  +  /  keys to increment / decrement d b E L time value.	

## DTC204A-2 / DTC324A-2

### Programming online parameters

Setpoint 1	Default : 50
Range : SPLL to SPHL	
If online parameter is selected as 5 E t ! then, Pressing  key will show on display : 5 E t ! & then <50>	
Press  +  /  keys to increment / decrement 5 E t ! value.	



Setpoint 2 / Dead band	Default : 0
Range : SPLL to SPHL	
If upper display is selected as 5 E t 2 / d b then, Pressing  key will show on display : 5 E t 2 / d b & then <0>	
Press  +  /  keys to increment / decrement 5 E t 2 / d b value.	

## CALIBRATION CERTIFICATE

Date :

Model No :

**Claimed Accuracy :**  
For TC inputs : 0.25% of FS ±1°  
For R & S inputs : 0.5% of F.S ± 2° (20 min of warm up time for TC input)  
For RTD inputs : 0.1% of FS ±1°

Sources calibrated against :

Multimeter calibration report no :

The calibration of this unit has been verified at the following values :

SENSOR	CALIBRATION TEMP (°C)	DISPLAY VALUE (°C)
J	35.0	35.0
	300.0	300.0
	600.0	600.0
K	35.0	35.0
	700.0	700.0
	1350	1350
PT100	0.0	0.0
	400.0	400.0
	800.0	800.0


The thermocouple / RTD curves are linearised in this microprocessor based product; and hence the values interpolated between the readings shown above are also equally accurate; at every point in the curve.

Unit is accepted as accuracy is within the specified limit of claimed accuracy and certificate is valid upto one year from the date of issue.

CHECKED BY :


## CONFIGURATION INSTRUCTIONS

KEY FUNCTIONS

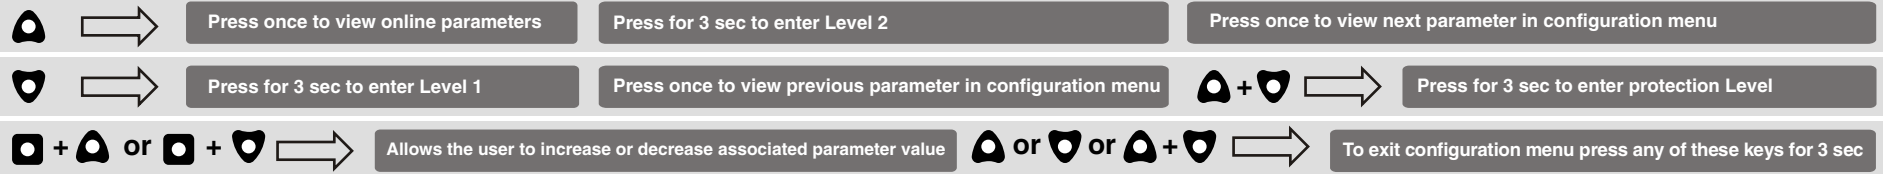

## OPERATIONAL MENU

POWER ON

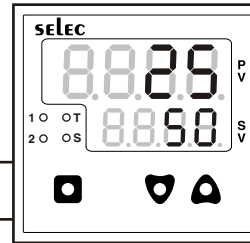

**Note :** At power ON lower display shows (momentary) input type selected in Level 1.  
\*Lower display not applicable for DTC204A-2/DTC324A-2

Press key for 3sec.

Press key for 3sec.

Press + keys for 3sec.

Level 1				
Display	Description	Default Value	Range	Display Condition
ᐱᐱᐱᐱ	Input type (Refer Table 1)	J	JK/T/R/S/RTD	—
ᐱᐱᐱᐱ	Display Resolution	i	1/0.1	Not prompted for R & S type
ᐱᐱᐱᐱ	Temperature unit	ᐱᐱ	°C/°F	—
ᐱᐱᐱᐱ	Set point low limit	-199	Min range of sensor selected to SPHL	—
ᐱᐱᐱᐱ	Set point high limit	ᐱᐱᐱ	SPHL to Max range of sensor selected	—
ᐱᐱᐱᐱ	Filter time constant	1.0	0.2 to 10.0 sec	—
ᐱᐱᐱᐱ	Control action for relay 1	ᐱᐱ	RE/FD	Not prompted for HC=YES
**ᐱᐱᐱᐱ	Control logic	ᐱᐱ / ᐱᐱᐱᐱ	PID/ONF	—
ᐱᐱᐱᐱ	Control Output selection	ᐱᐱᐱᐱ	RELAY/SSR	—
*ᐱᐱᐱᐱ	Dwell mode enable	ᐱᐱ	NO/YES	—
ᐱᐱ	Heat-cool mode selection	ᐱᐱ	NO/YES	—
ᐱᐱᐱᐱ	Control action for relay 2	ᐱᐱ	RE/FD/TIME*	When HC=NO, TIME prompted when DWEL=YES
ᐱᐱᐱᐱ	Relay 2 type	ᐱᐱᐱᐱ	DEV/ABS	When ACT2=RE/FD
*ᐱᐱᐱᐱ	Online menu for timer	ᐱᐱᐱᐱ	REMN/ELPS	When DWEL=YES
ᐱᐱᐱᐱ	Anti-reset windup %	ᐱᐱ.ᐱ	1.0 to 100.0%	When CNTL=PID
ᐱᐱᐱᐱ	Factory default (Reset all)	ᐱᐱ	NO/YES	—

Level 2				
Display	Description	Default Value	Range	Display Condition
ᐱᐱᐱᐱ	Tune	ᐱᐱᐱᐱ	OFF/ON	For CNTL=PID
ᐱᐱ	Proportional band	1ᐱ	1.0 to 400.0°	For CNTL=PID
i	Integral time	12ᐱ	0 to 9999 sec	For CNTL=PID
d	Derivative time	3ᐱ	0 to 9999 sec	For CNTL=PID
ᐱᐱᐱᐱ	Cycle time mode	ᐱᐱᐱᐱ	AUTO/USR.F	For CNTL=PID
ᐱᐱᐱᐱ	Cycle time	15ᐱ	0.1 to 99.9 sec	For CNTL=PID
ᐱᐱᐱᐱ	Hysteresis 1	1.ᐱ	0.1 to 99.9°	For CNTL=ONF
ᐱᐱᐱᐱ	Manual reset	ᐱᐱ	-19.9 to +19.9°	For CNTL=PID & I=0
ᐱᐱᐱᐱ	Proportional band-cool	1ᐱ	1.0 to 400.0°	For CNTL=PID & HC=YES
ᐱᐱᐱᐱ	Cycle time-cool	15ᐱ	0.1 to 99.9 sec	For CNTL=PID & HC=YES
ᐱᐱᐱᐱ	Hysteresis 2	1.ᐱ	0.1 to 99.9°	For HC=NO or HC=YES & CNTL=ONF
*ᐱᐱᐱᐱ	Dwell time	ᐱᐱᐱᐱ	OFF, 1 to 9999 min	When DWEL=YES
ᐱᐱᐱᐱ	Display bias	ᐱᐱ	-19.9 to 19.9°	—

Protection Level				
Display	Description	Default Value	Range	Display Condition
ᐱᐱᐱᐱ	Lock setpoint 1	ᐱᐱᐱᐱ	UNLK/LOCK	—
ᐱᐱᐱᐱ	Lock setpoint 2	ᐱᐱᐱᐱ	UNLK/LOCK	—
ᐱᐱᐱᐱ	Lock level 1	ᐱᐱᐱᐱ	UNLK/LOCK	—
ᐱᐱᐱᐱ	Lock level 2	ᐱᐱᐱᐱ	UNLK/LOCK	—
*ᐱᐱᐱᐱ	Lock dwell time	ᐱᐱᐱᐱ	UNLK/LOCK	Prompted when DWEL=YES

**Note**

- Locking parameters (LVL1 or LVL2 or SP or DWEL) will not permit change in the value of respective level parameters.  
**Time value (online) can be altered only when DWEL is not locked in protection level.**
- Continuous operation of + keys for SP or other parameters makes update speed faster in 3 stages after 3 sec.

\* Parameter marked not applicable for DTC204A-2 & DTC324A-2  
\*\* Default value of ᐱᐱᐱᐱ = ᐱᐱᐱᐱ for DTC204A-2 & DTC324A-2

(Specifications are subject to change, since development is a continuous process)

**Selec Controls Pvt. Ltd.**  
Tel. No. : +91-22-40394200 / 40394202  
Fax No. : +91-22-28471733 Toll free : 1800 227 353  
Website: [www.selec.com](http://www.selec.com) Email: [sales@selec.com](mailto:sales@selec.com)