

MFM384
Operating Instructions

96 x 96

SPECIFICATIONS

DISPLAY

Liquid crystal display with backlight 4 lines, 4 digits per line to show electrical parameters

5th line, 8 digits to show energy

Bar graph for current indication

LCD INDICATORS

- Integration of energy
- PRG - Unit is in configuration menu
- Communication in progress

MAX DMD - Maximum and Minimum Demand Power
THD - Total harmonic distortion

IM - Import Energy
EP - Export Energy

WIRING INPUT

3 Ø - 4 wire, 3 Ø - 3 wire, 2 Ø - 3 wire and 1 Ø - 2 wire system

RATED INPUT VOLTAGE

11 to 300V AC (L-N) ; 19 to 519V AC (L-L) Installation Category III (600V)

FREQUENCY RANGE

45-65 Hz

RATED INPUT CURRENT

Nominal 5A (Min 1A, Max-6A)

BURDEN

0.5 A@5A per phase

CT PRIMAR

1A/ 5A@ 10,000A programmable by any V
Note 1: At 10,000A secondary is 1 else

C primary is 5A@10,000A

CT SECUNDAR

1A or 5A (Programmable)

PT PRIMAR

100V to 500kV (Programmable for any value)

PT SECUNDAR

100 to 500V AC (L-L) (Programmable for any value)

Display update time

1 sec. for all parameters

Display Scrolling

Automatic or Manual (Programmable)

POWER CONSUMPTION

Less than 8W

ENVIRONMENTAL CONDITIONS

- Indoor use

- Altitude of up to 2000 meters

- Pollution degree II

Temperature@operating: -10 to 55

Storage: -20 to 70

Humidity: Up to 85% non-condensing

PROTECTION CLASS :

INSTALLATION CATEGORY III

MOUNTING Panel mounting

WEIGHT MFM384-C : 296gms

OUTPUT Pulse Output range : External 24V

ORDER CODE INFORMATION

Product	Supply	Certification
MFM384-C GE Class 1	85 to 300V AC, 50/60Hz ($\pm 5\%$)	CE UL LISTED
MFM384-C GE CL05 Class 0.5S	85 to 300V AC, 50/60Hz ($\pm 5\%$)	CE UL LISTED
MFM384-CU Class 1	100 to 240V AC, -15% +12%, 50/60Hz ($\pm 5\%$)	CE UL LISTED

SERIAL COMMUNICATION	
Interface standard and protocol	RS485 and MODBUS
Communication address	1 to 255
Transmission mode	Half duplex
Data types	Float and Integer
Transmission distance maximum	500m
Transmission Speed (in bps)	1200, 2400, 4800, 9600, 19200
Parity	None, Odd, Even
Stop bits	1 or 2
Response time	100ms (max and independent of baud rate)

If the equipment is not used in a manner manufacturer it might impair the protection by the equipment.


- Do not use the equipment if there is any damage.
- Ensure that the equipment is supplied with the correct voltage.

CAUTION :

1. Read complete instructions prior to installation and operation of the unit.

2. Risk of electric shock.

3. The equipment in its installed state must not come in close proximity to any heating sources, such as heating pipes, or other unwanted process by products.

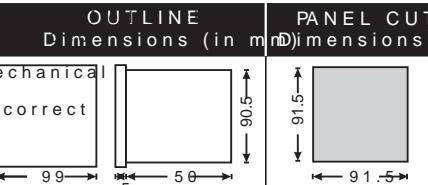

MAINTENANCE

1. The equipment should be cleaned regularly to avoid close proximity to any heating sources, such as heating pipes, or other unwanted process by products.

2. Clean the equipment with a clean dry or dry cloth.

3. Do not use any cleaning agent other than water.

WIRING GUIDELINES

WARNING :

1. To prevent the risk of electric shock, power supply to the equipment must be kept OFF while doing the wiring arrangement.

2. Wiring shall be done strictly according to the terminal layout. Confirm that all connections are correct.

3. Use lugged terminals.

4. To reduce electromagnetic interference use of wires with adequate ratings and twists of the same size shall be made with shortest connections.

5. Layout of connecting cables shall be away from any source.


6. Cable used for connection to power source, must have a cross section of 0.5mm² to 2.5mm² (750C(milA)).

These wires shall have current carrying capacity of 10A.

7. Copper cable should be used (Stranded or Single core cable).

8. Before attempting work on device, ensure absence of voltages using appropriate voltage detection device.

TERMINAL CONNECTIONS

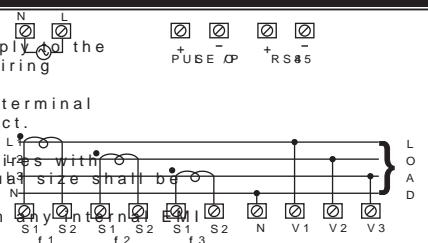

INSTALLATION GUIDELINES

CAUTION :

1. This equipment, being built-in-type, normally becomes a part of main control panel and in such case the terminals remain accessible to the end user after installation and internal wiring.

2. Conductors must not come in contact with the circuitry of the equipment or else it may lead to a safety hazard that may in turn endanger life or cause electric shock to the operator.

3. Circuit breaker or mains switch must be installed in the power source and supply terminals to the meter. OFF function. However, the meter is accessible to the operator.

4. Before disconnecting the secondary of the external transformer from the equipment, make sure that the transformer is short circuited to avoid risk of electric shock and injury.

5. The equipment shall not be installed in environments other than those mentioned in this manual.

6. The equipment does not have a built-in-type fuse.

Installation of external fuse is not recommended. Rating 275V AC for electrical circuit.

KEY PRESS	ONLINE DESCRIPTION
1	Displays line to neutral V of three phase and average line to neutral V.
2	The second screen displays line to line voltage of three phase and average line to line voltage.
3	The third screen displays total percentage harmonics of line to neutral voltage of three phase and average line to neutral voltage.
4	The fourth screen displays percentage harmonics of line to line voltage of three phase and average line to line voltage.
5	The fifth screen press for 3 sec, Displays phase sequence indication.
6	Note 1) For 3 Ø 3 wire system, only the fourth and fifth screen will be available.
7	2) In 1 Ø 2 wire system only first, third and fifth screen will be available.

MECHANICAL

1. Prepare the panel cutout with dimensions below.

2. Push the meter into the panel cutout. Secure its place by fitting the clamp on the rear side of the panel or on diagonally opposite location.

3. To ensure the seal, tighten the screws evenly.


Terminal screw tightening torque :


0.68 N-m to 0.79 N-m (6.018 In-Lb to 6.992 In-Lb)

Screw clamp tightening torque 805: (Lb-inch)

The first screen displays phase current of the three phase and neutral current.
The second screen displays phase maximum current demand of the three phase current.
The third screen displays total percentage of current of three phase and a phase current.
The fourth screen press for 3 sec, Displays current connection indication page.
Note For 3 Ø 3 wire system only first, third and fifth screen will be available.

Key Press	Online Description	Key Press	Online Description	Config page	Function	Range of Selection	Factory Setting																																																								
Press VAF	<p>The first screen displays a current power factor of first phase apparent energy of three phase.</p> <p>The second screen displays a current power factor of second phase apparent energy of three phase.</p> <p>The third screen displays a current power factor of third phase apparent energy of three phase.</p> <p>The fourth screen displays a value of voltage current power factor of first phase apparent energy of three phase.</p> <p>Note1) In 3Ø3 wire system voltage and power factor are available in line.</p> <p>2) In 1Ø2 wire system only first screen will be available.</p>		<p>The twenty first screen displays apparent energy of three phase.</p> <p>The twenty second screen displays total apparent energy of three phase.</p> <p>The twenty third screen displays run hour.</p> <p>The twenty fourth screen displays Auxiliary Interrupts.</p> <p>Note1) In 3Ø3 wire system only ninth, twenty second, third and twenty fourth screen will be available.</p> <p>2) In 1Ø2 wire system the ninth, tenth, thirteenth, sixteenth, seventeenth, eighteenth, nineteenth, twenty second, twenty third and twenty fourth screen will be available.</p>	12	Demand interval	Setting / Function																																																									
Press PF	<p>The first screen displays a current power factor of three phase apparent energy of three phase.</p> <p>Note For 3Ø3 wire system only average power factor will be available in screen.</p>		<p>NETWORK SELECTION AND WIRING</p> <p>Network selection in wiring configuration mode</p> <table border="1"> <tr><td>3P4W</td><td>3P4W P3WP2W (P1/P2/P3)</td></tr> <tr><td>3P3W</td><td>3P3W</td></tr> </table> <p>Note: P1, P2 and P3 are Three Phase.</p>	3P4W	3P4W P3WP2W (P1/P2/P3)	3P3W	3P3W	13	Demand interval	duration 30	15																																																				
3P4W	3P4W P3WP2W (P1/P2/P3)																																																														
3P3W	3P3W																																																														
Press P	<p>The first screen displays active power phase and total active power.</p> <p>The second screen displays reactive power of three phase and total reactive power.</p> <p>The third screen displays apparent power of three phase and total apparent power.</p> <p>The fourth screen displays active, reactive and power factor of first phase apparent power.</p> <p>The fifth screen displays active, reactive and power factor of second phase apparent power.</p> <p>The sixth screen displays active, reactive and power factor of third phase apparent power.</p> <p>The seventh screen displays total active reactive, apparent power and average power of three phase.</p> <p>The eighth screen displays maximum active power demand, reactive power demand and apparent power demand.</p> <p>The ninth screen displays minimum active power demand and reactive power demand.</p> <p>Note1) For 3Ø3 wire system seventh, eighth and ninth screen will be available.</p> <p>2) In 1Ø2 wire system only first, second and ninth screen will be available.</p>		<p>AUTOMATION AND DESCRIPTION</p> <p>Press () button for 3 seconds to toggle between Auto and Manual mode.</p> <p>Note: By default unit operates in manual mode. In second mode online pages scroll automatically at the rate of 0.5 seconds per page.</p> <p>The unit switches to manual mode when any key is pressed for 5 sec. unit and if any key is not pressed resumes automatic mode.</p>	14	Demand interval	length 30 min																																																									
			<p>CONFIGURATION</p> <p>The user is dedicated with symbols marked with arrows (↑, ↓, ←, →) used to select items in configuration setting.</p> <p>Note: The settings should be used by professionals, making through user manual after having understood the configuration setting.</p>	15	Max Page Auto	1 to 21	21																																																								
Press E	<p>The first screen displays import active energy of first phase.</p> <p>The second screen displays import active energy of second phase.</p> <p>The third screen displays import active energy of third phase.</p> <p>The fourth screen displays export active energy of first phase.</p> <p>The fifth screen displays export active energy of second phase.</p> <p>The sixth screen displays export active energy of third phase.</p> <p>The seventh screen displays total import active energy of three phase.</p> <p>The eighth screen displays total export active energy of three phase.</p> <p>The ninth screen displays total net active energy of three phase.</p> <p>The tenth screen displays import reactive energy of first phase.</p> <p>The eleventh screen displays import reactive energy of second phase.</p> <p>The twelfth screen displays import reactive energy of third phase.</p> <p>The thirteen screen displays export reactive energy of first phase.</p> <p>The fourteen screen displays export reactive energy of second phase.</p> <p>The fifteen screen displays export reactive energy of third phase.</p> <p>The sixteen screen displays total import reactive energy of three phase.</p> <p>The seventeen screen displays total export reactive energy of three phase.</p> <p>The eighteen screen displays total net reactive energy of three phase.</p> <p>The nineteen screen displays apparent energy of first phase.</p> <p>The twenty screen displays apparent energy of second phase.</p>		<p>CONFIGURATION</p> <p>• User keys to select item from the configuration menu.</p> <p>• User keys to move cursor right by one digit at a time.</p> <p>• User keys to increase/decrease value.</p> <p>• User key to back previous page.</p> <p>• User key to a setting on next page.</p>	16	Change Page Sequence	No																																																									
			<table border="1"> <thead> <tr> <th>Config page</th><th>Function</th><th>Range of Selection</th><th>Factory Setting</th></tr> </thead> <tbody> <tr><td>1</td><td>Active Password</td><td>0000 to 99990000</td><td></td></tr> <tr><td>1</td><td>Change Password</td><td>No / e/s</td><td>No</td></tr> <tr><td>1.1</td><td>New Password</td><td>0000 to 99990000</td><td></td></tr> <tr><td>2</td><td>Network Selection</td><td>3P4W, 3P3W, 1P2W-P1, 1P2W-P2 and 1P2W-P3</td><td>3P4W</td></tr> <tr><td>3</td><td>CT Secondary</td><td>1A or 5A</td><td>5</td></tr> <tr><td>4</td><td>CT Primary</td><td>1A, 5A, 10,000A</td><td>5</td></tr> <tr><td>5</td><td>PT Secondary</td><td>100V to 5003/50</td><td></td></tr> <tr><td>6</td><td>PT primary</td><td>100V to 5003/50</td><td></td></tr> <tr><td>7</td><td>Slave Id</td><td>1 to 255</td><td>1</td></tr> <tr><td>8</td><td>Baud Rate</td><td>300,000, 200,000, 240,000, 9600 and 19200 (bps)</td><td>9600</td></tr> <tr><td>9</td><td>Parity</td><td>None, Odd, Even</td><td>None</td></tr> <tr><td>10</td><td>Stop Bit</td><td>1 or 2</td><td>1</td></tr> <tr><td>11</td><td>Back Light</td><td>0 to 7200 s@0.00</td><td></td></tr> </tbody> </table>	Config page	Function	Range of Selection	Factory Setting	1	Active Password	0000 to 99990000		1	Change Password	No / e/s	No	1.1	New Password	0000 to 99990000		2	Network Selection	3P4W, 3P3W, 1P2W-P1, 1P2W-P2 and 1P2W-P3	3P4W	3	CT Secondary	1A or 5A	5	4	CT Primary	1A, 5A, 10,000A	5	5	PT Secondary	100V to 5003/50		6	PT primary	100V to 5003/50		7	Slave Id	1 to 255	1	8	Baud Rate	300,000, 200,000, 240,000, 9600 and 19200 (bps)	9600	9	Parity	None, Odd, Even	None	10	Stop Bit	1 or 2	1	11	Back Light	0 to 7200 s@0.00		17	Pulse weight (kWh)	1 to 999.9999	99.99
Config page	Function	Range of Selection	Factory Setting																																																												
1	Active Password	0000 to 99990000																																																													
1	Change Password	No / e/s	No																																																												
1.1	New Password	0000 to 99990000																																																													
2	Network Selection	3P4W, 3P3W, 1P2W-P1, 1P2W-P2 and 1P2W-P3	3P4W																																																												
3	CT Secondary	1A or 5A	5																																																												
4	CT Primary	1A, 5A, 10,000A	5																																																												
5	PT Secondary	100V to 5003/50																																																													
6	PT primary	100V to 5003/50																																																													
7	Slave Id	1 to 255	1																																																												
8	Baud Rate	300,000, 200,000, 240,000, 9600 and 19200 (bps)	9600																																																												
9	Parity	None, Odd, Even	None																																																												
10	Stop Bit	1 or 2	1																																																												
11	Back Light	0 to 7200 s@0.00																																																													
			<p>• For resetting energy parameters user password. If correct password is entered reset all energy parameters. This password is the configuration password by 1.</p>	18	Pulse duration (Sec)	0.1 to 2.0	0.1																																																								
			<p>• Factory default</p>	19	Factory default	No / e/s	No																																																								
			<p>• Reset energy and MAX demand</p>	20	Reset energy and MAX demand	No / e/s	No																																																								
			<p>• Password</p>	20.1	Password	0001 to 99990001																																																									
			<p>• Reset active energy</p>	20.0.1	Reset active energy	No / e/s	No																																																								
			<p>• Reset reactive energy</p>	20.0.2	Reset reactive energy	No / e/s	No																																																								
			<p>• Reset apparent energy</p>	20.0.3	Reset apparent energy	No / e/s	No																																																								
			<p>• Reset Cumulative DMD</p>	20.0.4	Reset Cumulative DMD	No / e/s	No																																																								
			<p>• Reset active power</p>	20.0.5	Reset active power	MAX DMD	No																																																								
			<p>• Reset reactive power</p>	20.0.6	Reset reactive power	MIN DMD	No																																																								
			<p>• Reset apparent power</p>	20.0.7	Reset apparent power	MAX DMD	No																																																								
			<p>• Reset Reactive power</p>	20.0.8	Reset Reactive power	MIN DMD	No																																																								
			<p>• Reset apparent power</p>	20.0.9	Reset apparent power	MAX DMD	No																																																								
			<p>• Reset Run Hour</p>	21	Reset Run Hour	No / e/s	No																																																								
			<p>• Reset Auxiliary Intensity</p>	22	Reset Auxiliary Intensity	No / e/s	No																																																								

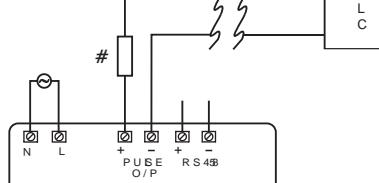SERIAL NUMBER DESCRIPTION																									
Press PF () key for 10sec. to display 8 digit serial number only for 10sec. at 5th line of display																									
EXAMPLE TO READ DATA FROM METER																									
<p>Data format: Big Endian format If total Active Energy = 1234.12 kWh Start Address : 30090, No. of register : 02 Hexadecimal Equivalent of 1234.12 is 0x444A</p>																									
<p>Data stored at 30090 is <u>A</u> <u>B</u> LSB : 44 9A Data stored at 30091 is <u>C</u> <u>D</u> MSB : 43 D7</p>																									
<p>Data Format to be followed is A-B-C-D</p>																									
<p>Data format: Mid Little Endian If total Active Energy = 1234.12 kWh Start Address : 30090, No. of register : 02 Hexadecimal Equivalent of 1234.12 is 0x444A</p>																									
<p>Data stored at 30090 is <u>C</u> <u>D</u> LSB : 43 D7 Data stored at 30091 is <u>A</u> <u>B</u> MSB : 44 9A</p>																									
<p>Data Format to be followed is C-D-A-B</p>																									
<p>Power Factor sign convention (PF sign) can be positive or negative, and is defined by the conventions used by the EC standard PF sign correlates with the direction of real power (kW) flow.</p>																									
<p>Quadrant 1 and 4 Positive real power (kW). The PF sign is positive(+). Quadrant 2 and 3 Negative real power (kW). The PF sign is negative(-).</p>																									
APPLICATION OF PULSE OUTPUT																									
● PROCESS INTEGRATION																									
 <p>MFM384-C-CE / MFM384-C-CU / MFM384-C-CE-CL05</p> <table border="1" data-bbox="1725 1294 1989 1477"> <tr> <td>f1</td> <td>f2</td> <td>f3</td> <td></td> <td></td> <td></td> <td></td> <td></td> </tr> <tr> <td>S1</td> <td>S2</td> <td>S1</td> <td>S2</td> <td>S1</td> <td>S2</td> <td>N</td> <td>V1</td> </tr> <tr> <td> </td> <td> </td> <td> </td> <td> </td> <td> </td> <td> </td> <td>V2</td> <td>V3</td> </tr> </table>		f1	f2	f3						S1	S2	S1	S2	S1	S2	N	V1							V2	V3
f1	f2	f3																							
S1	S2	S1	S2	S1	S2	N	V1																		
						V2	V3																		
<p>Pulse output from MFM384-C meter can be integrated in a process through a PLC for on line control of content in the process. If the PLC has a self excited digital input, external supply is not needed. The kWh pulse is also used to derive average power from smart meter through PLC.</p>																									

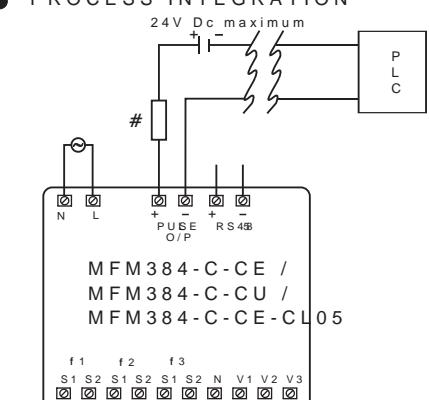

Pulse output from MFM384-C meter can be integrated into a process through a PLC for on line control of content in the process. If the PLC has a self excited digital input, external supply is not needed. The kWh pulse is also used to derive average power. The user will be able to obtain a greater than 96% accuracy.

MODBUS REGISTER ADDRESSES LIST

Readable Parameters : [Length (Register) : 2 ; Data Structure : Float]	
Address	Hex Address
30000 0x00	Voltage V1N
30002 0x02	Voltage V2N
30004 0x04	Voltage V3N
30006 0x06	Average Voltage LN
30008 0x08	Voltage V12
30010 0x0A	Voltage V23
30012 0x0C	Voltage V31
30014 0x0E	Average Voltage LL
30016 0x10	Current I1
30018 0x12	Current I2
30020 0x14	Current I3
30022 0x16	Average Current
30024 0x18	kW1
30026 0x1A	kW2
30028 0x1C	kW3
30030 0x1E	kVA1
30032 0x20	kVA2
30034 0x22	kVA3
30036 0x24	kVar1
30038 0x26	kVar2
30040 0x28	kVar3
30042 0x2A	Total KW
30044 0x2C	Total KV
30046 0x2E	Total KVA
30048 0x30	PF1
30050 0x32	PF2
30052 0x34	PF3
30054 0x36	Average PF
30056 0x38	Frequency
30058 0x3A	Total net kWh
30060 0x3C	Total net kV
30062 0x3E	Total net kVarV
30064 0x40	kW Active Power Max
30066 0x42	kW Active Power Min
30068 0x44	kVar Reactive Power Max
30070 0x46	kVar Reactive Power Min
30072 0x48	kVA Apparent Power Max
30080 0x50	Auxiliary Interrupt
30082 0x52	Run hour
30084 0x54	kWh1 (Imp)
30086 0x56	kWh2 (Imp)
30088 0x58	kWh3 (Imp)
30090 0x5A	kWh1 (Exp)
30092 0x5C	kWh2 (Exp)
30094 0x5E	kWh3 (Exp)
30096 0x60	Total kWh (Imp)
30098 0x62	Total kWh (Exp)
30100 0x64	kVAh1 (Imp)

Readable / writable parameters : [Data Structure : Integer]

Address	Hex Address	Parameter	Range	Length (Register)
40000	0x00	Password	Min value : 0 Max value : 9998	1
40001	0x01	N/W Selection	Value : 0 Meaning : 3P4W Value : 1 Meaning : 3P3W Value : 2 Meaning : 1P2W Value : 3 Meaning : 1P2W Value : 4 Meaning : 1P3W	1
40002	0x02	CTSecondary	Min value : 1 Max value : 5	1
40003	0x03	CTprimary Secondary	Min value : 1 Max value : 10000	1
40004	0x04	PTSecondary	Min value : 0 Max value : 500	1
40005	0x05	PTprimary	Min value : 0 Max value : 500kV	2
40007	0x07	Slave id	Min value : 0 Max value : 255	1
40008	0x08	Baud rate	Value : 0x0 Meaning : 300 Value : 0x1 Meaning : 600 Value : 0x2 Meaning : 1200 Value : 0x3 Meaning : 2400 Value : 0x4 Meaning : 4800 Value : 0x5 Meaning : 9600 Value : 0x6 Meaning : 19200	1
40009	0x09	Parity	Value : 0x0 Meaning : None Value : 0x1 Meaning : Odd Value : 0x2 Meaning : Even	1
40010	0x0A	Stop bit	Value : 0x0 Meaning : 1 Value : 0x1 Meaning : 2	1
40011	0x0B	Backlight OFF	Min value : 0 Max value : 7200	1
40012	0x0C	Factory Default	1 Meaning : Set to factory setting	range
40013	0x0D	Reset Active Energy	1 Meaning : Reset Active Energy	
40014	0x0E	Reset Apparent Energy	1 Meaning : Reset Apparent Energy	
40015	0x0F	Reset Reactive Energy	1 Meaning : Reset Reactive Energy	
40016	0x10	Auto Mode Pages	Min value : 1 Max value : 21	1
40017	0x11	Page Address Sequence	1 Meaning : 1-First Page ; 21-Last Page	
40018	0x12	Page Address Sequence	1 Meaning : 1-First Page ; 21-Last Page	
40019	0x13	Page Address Sequence	1 Meaning : 1-First Page ; 21-Last Page	
40020	0x14	Page Address Sequence	1 Meaning : 1-First Page ; 21-Last Page	
40021	0x15	Page Address Sequence	1 Meaning : 1-First Page ; 21-Last Page	
40022	0x16	Page Address Sequence	1 Meaning : 1-First Page ; 21-Last Page	
40023	0x17	Page Address Sequence	1 Meaning : 1-First Page ; 21-Last Page	
40024	0x18	Page Address Sequence	1 Meaning : 1-First Page ; 21-Last Page	
40025	0x19	Page Address Sequence	1 Meaning : 1-First Page ; 21-Last Page	
40026	0x1A	Page Address Sequence	1 Meaning : 1-First Page ; 21-Last Page	
40027	0x1B	Page Address Sequence	1 Meaning : 1-First Page ; 21-Last Page	
40028	0x1C	Page Address Sequence	1 Meaning : 1-First Page ; 21-Last Page	
40029	0x1D	Page Address Sequence	1 Meaning : 1-First Page ; 21-Last Page	
40030	0x1E	Page Address Sequence	1 Meaning : 1-First Page ; 21-Last Page	
40031	0x1F	Page Address Sequence	1 Meaning : 1-First Page ; 21-Last Page	
40032	0x20	Page Address Sequence	1 Meaning : 1-First Page ; 21-Last Page	
40033	0x21	Page Address Sequence	1 Meaning : 1-First Page ; 21-Last Page	
40034	0x22	Demand Interval Met	Value : 0x0 Meaning : Sliding Value : 0x1 Meaning : Fixed	1
40035	0x23	Demand Interval Deviation	Min value : 1 Max value : 30	1
40036	0x24	Demand Interval Length	Min value : 1 Max value : 30	1

Constant Meaning {143 + [(Harmonic no-2) + 60 x Constant Parameter] * 1000} For Example, to find the Harmonic address V21 following formula can be used :
$$V3N = 143 + [(14-2) * 2] + 60 * 5 = 467$$
 Formula with the parameter
$$V21 = 143 + [(14-2) * 2] + 60 * 5 = 467$$
 So, Check the Harmonic of Voltage V31 at address 467


MODBUS REGISTER ADDRESSES LIST

Readable & writeable parameters : Data structure : Register


MODBUS register addresses is continued...

Address	Hex Address	Parameter	Range	Length (Register)
40037	0x25	Reset Active Power Value	MaxeD:MD	Meaning : Reset Max Active power
40038	0x26	Reset Active Power Value	MinD:MD	Meaning : Reset Min Active power
40039	0x27	Reset Reactive Power Value	MaxeD:MD	Meaning : Reset Max Reactive power
40041	0x29	Reset Apparent Power Value	MaxeD:MD	Meaning : Reset Max Apparent Power
40042	0x2A	Reset Run Hour	Value : 1	Meaning : Reset Run Hour 1
40043	0x2B	Reset Auxiliary Interrupt	Value : 1	Meaning : Reset Auxiliary interrupt
40044	0x2C	Reset Reactive Power Value	MinD:MD	Meaning : Reset Min Reactive power
40054	0x36	Page Address Sequence	1-First Page ; 21-Last Page	
40055	0x37	Page Address Sequence	1-First Page ; 21-Last Page	
40057	0x39	Pulse Duration	MinValue : 0.1 (MaxValue : 2.0(sec))	1
40058	0x3A	Pulse Weight	MinValue : 0.0 (MaxValue : 99.99)	1
40059	0x3B	Page Address Sequence	1-First Page ; 21-Last Page	
40060	0x3C	Page Address Sequence	1-First Page ; 21-Last Page	
40064	0x40	Reset Max Current	Value : 1	Meaning : Reset Max Current
40070	0x46	Change Endianness	Value : 0 or 1	Meaning : 0: Mid Little Endian (CDAB) 1: Big Endian (ABCD) Default setting :Big Endian

3 PHASE 4-WIRE (MOMUSED)


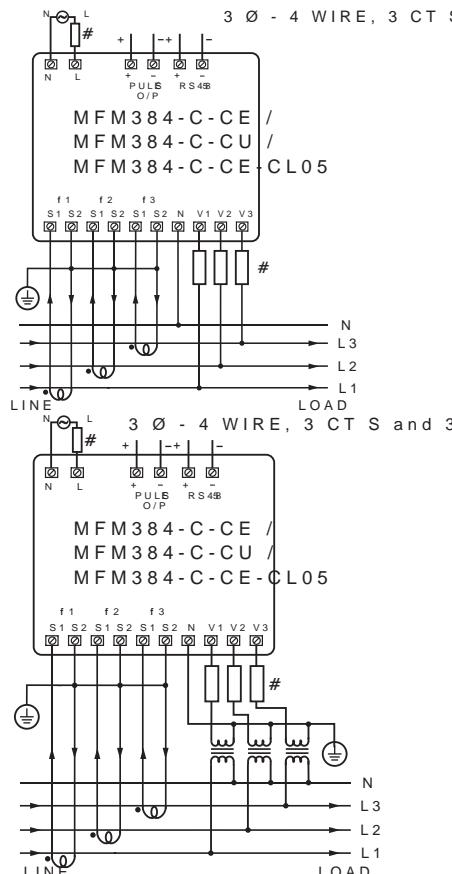


3 PHASE 3-WIRE

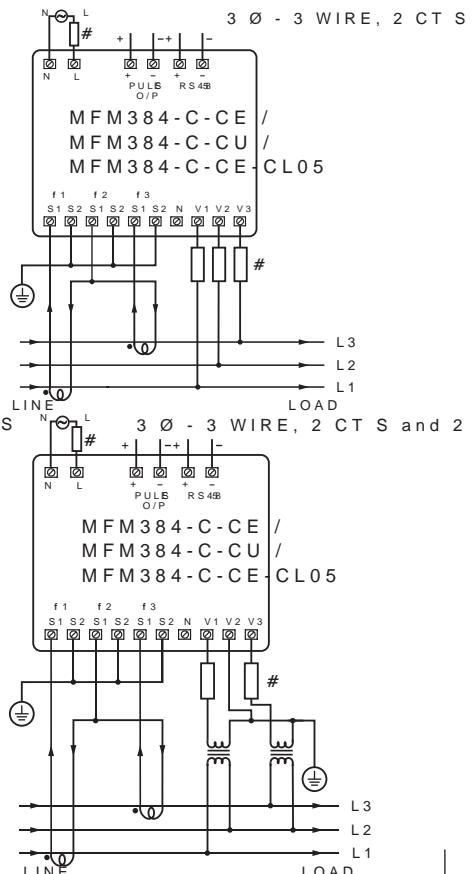


TYPICAL WIRING DIAGRAM


2 PHASE - 3 WIRE

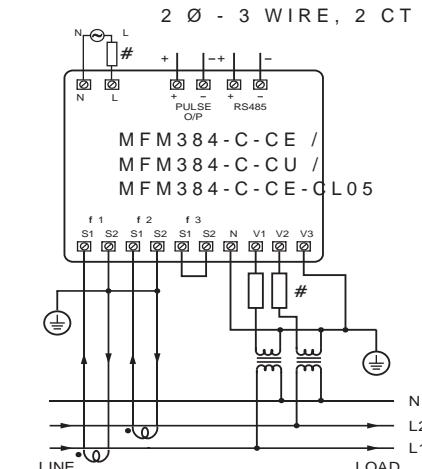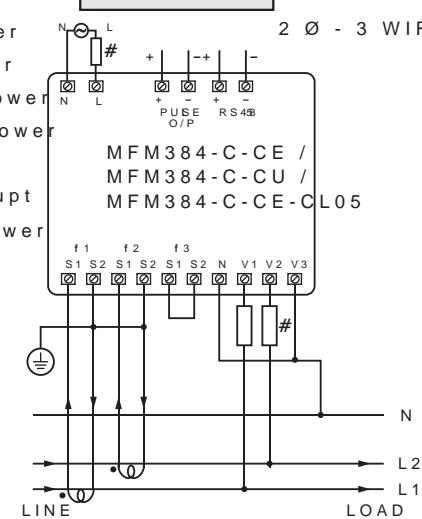


1 PHASE - 2 WIRE

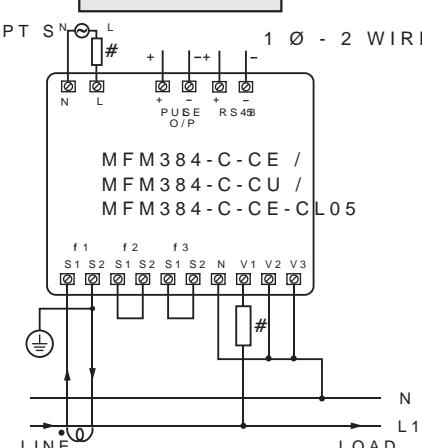

CONNECTION DIAGRAM FOR COMMUNICATION

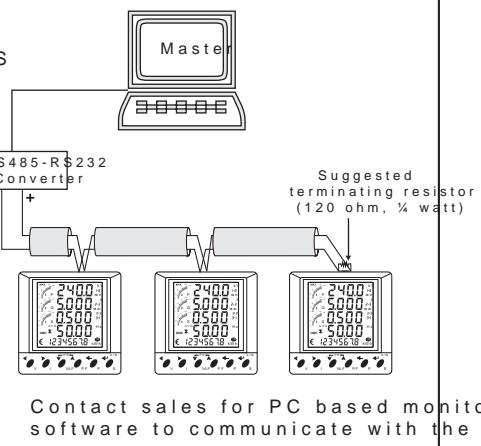

All fuse types class 50A type
0.5A fast acting 600V

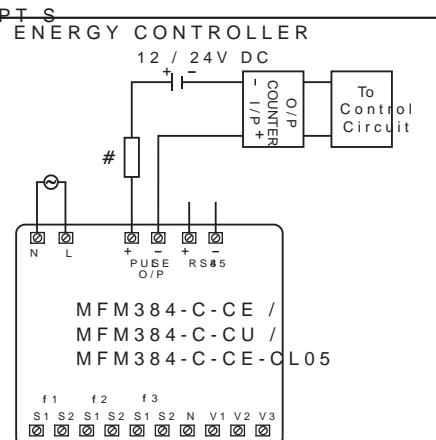

Pulse output from MFM384-C meter can be used for generator or total energy controller by interfacing. Pre-settable counter and control circuits (Contact Relay Trip Circuit).

The counter loaded with the maximum energy consumption value each set point provides output control to take appropriate action.

All fuse types class 50A type
0.5A fast acting 600V

(Specifications are subject to change, since development is a continuous process.)

Selec Controls Pvt. Ltd., India

Factory Address :
EL-27/1, Electronic Zone, TTC Industrial Area, MIDC, Mahape, Navi Mumbai - 400 710, INDIA.
Tel. No. : +91-22-41 418 419/430 | Fax No. : +91-22-28471733
Toll free : 1800 227 353 (BSNL/MTNL Subscribers only)
Website : www.selec.com | Email : sales@selec.com