



96 x 96mm

## SPECIFICATIONS

<b>Display</b>	: 4 Digit 7 segment LED Display
<b>Wiring input</b>	: 3 Ø 4 W, 3 Ø 3 W, 1 Ø 2 W
<b>Rated input voltage</b>	: 11 - 300V AC(L-N) 19 - 516V AC(L-L)
<b>Frequency range</b>	: 50/60 Hz
<b>Max continuous I/P range</b>	: 120% of rated I/P Voltage
<b>Over range indication</b>	: "Or" for input > 516V(L-L) "Or" for input > 300V(L-N)
<b>Impedance</b>	: 1MΩ (±5%)
<b>PT Primary</b>	: 100V - 999kV
<b>PT Secondary</b>	: 100V - 500V (Programmable to any value)
<b>Resolution</b>	: Auto resolution
<b>Accuracy</b>	: ±0.5% of full Range

<b>Measuring Method</b>	: True RMS
<b>Display Update Time</b>	: 1sec.
<b>Power Consumption</b>	: Less than 5VA
<b>Auxiliary Supply Voltage</b>	: 230V AC(±20%), 50/60Hz
<b>Weight</b>	: 190gms
<b>Mounting</b>	: Panel mounting
<b>Environmental Conditions :</b>	
Operating Temperature	: 0°C to 50°C
Operating Storage	: -25°C to 70°C
Relative Humidity	: 0-90% (non-condensing)
Pollution degree	: II

## SAFETY PRECAUTIONS

All safety related codifications, symbols and instructions that appear in this operating manual or on the equipment must be strictly followed to ensure the safety of the operating personnel as well as the instrument.

If the equipment is not used in a manner specified by the manufacturer it might impair the protection provided by the equipment.

- Do not use the equipment if there is any mechanical damage.
- Ensure that the equipment is supplied with correct voltage.

### ⚠ CAUTION :

1. Read complete instructions prior to installation and operation of the unit.
2. Risk of electric shock.
3. The equipment in its installed state must not come in close proximity to any heating sources, caustic vapors, oils, steam or other unwanted process by products.

## CONFIGURATION

- Use  $\triangleright$  +  $\triangle$  key to enter & exit from config. menu, for 5 sec.
- Use  $\triangle$  key to go to next parameter.
- Use  $\triangleright$  key to edit the parameter & press same key for 2 sec. to save parameter.
- Use  $\triangle$  key to increment parameter value.
- To set the value of PT primary in kV, First edit the value and then press  $\triangle$  key for 3 sec., Display will shift to kV with resolution 000.0kV & this process is same, to set the value of PT primary in V.

Config. page.	Function	Range or Selection	Factory Setting
1	Network Selection	3 $\phi$ 4W, 3 $\phi$ 3W, 1 $\phi$ 2W-R, 1 $\phi$ 2W-Y, 1 $\phi$ 2W-B	3P4W
2	PT Primary	100-999kV	350
3	PT Secondary	100-500V	350

## ONLINE PAGE DESCRIPTION

	KEY PRESS	DESCRIPTION
Press Key (A)	* —	Displays 1 <sup>st</sup> phase voltage
	* 1 <sup>st</sup> time	Displays 2 <sup>nd</sup> phase voltage
	* 2 <sup>nd</sup> time	Displays 3 <sup>rd</sup> phase voltage
	* 3 <sup>rd</sup> time	Displays average line neutral voltage
	4 <sup>th</sup> time	Displays line-line voltage of 1 <sup>st</sup> & 2 <sup>nd</sup> Phase
	5 <sup>th</sup> time	Displays line-line voltage of 2 <sup>nd</sup> & 3 <sup>rd</sup> Phase
	6 <sup>th</sup> time	Displays line-line voltage of 3 <sup>rd</sup> & 1 <sup>st</sup> Phase
	7 <sup>th</sup> time	Displays average line-line voltage

**Note :** \* Marked pages are not available when network selection is 3P3W. and 1P2W respective phase parameter will be available.

## AUTO MANUAL DESCRIPTION


Press  $\triangleright$  key for 3sec. to switch in auto and manual mode.

## SERIAL NUMBER DESCRIPTION

Press  $\triangle$  key for 10sec. to display 8 digit serial number only for 10sec. in two windows.

## WIRING DIAGRAM WITH TERMINAL CONNECTIONS

3P4W

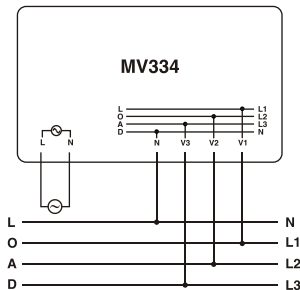

(Specifications subject to change as development is a continuous process.)

## Selec Controls Pvt. Ltd., India

Factory Address :

EL-27/1, Electronic Zone, TTC Industrial Area, MIDC, Mahape,  
Navi Mumbai - 400 710, INDIA.

Tel. No. : +91-22-4148 419/430 | Fax No. : +91-22-28471733

Toll free : 1800 227 353 (BSNL/MTNL Subscribers only)

Website : [www.selec.com](http://www.selec.com) | Email : [sales@selec.com](mailto:sales@selec.com)