

PRODUCT PROFILE

144 x 144 x 50mm
SPECIFICATIONS

| | |
|---------------------------|--|
| Display | : Liquid crystal display with dual color backlight 3 line, 4 digits to show electrical parameters. |
| Wiring input | : 3 Ø 4 wire, 3 Ø 3 wire, 1 Ø 2 wire, 2 Ø 2 wire |
| Rated input voltage | : 11 to 300V AC (L-N) ; 50 to 520V AC (L-L) |
| Rated input current | : Nominal 5A AC (MIN-11mA, MAX-6A) |
| Burden | : 20 mOhms |
| Frequency range | : 45-65 Hz |
| CT primary | : 1A / 5A to 9999A (programmable for any value) |
| NOTE | : 1A to 9999A if CT Secondary is 1 else CT Primary is 5A to 9999A |
| CT Secondary | : 1A or 5A (Programmable) |
| PT Primary | : 100V to 500kV (Programmable for any value) |
| PT Secondary | : 100V to 500V (Programmable for any value) |
| Display update time | : 1sec for all parameters |
| Display scrolling | : Auto / Manual / Default (Programmable) |
| Display scrolling time | : 5 Sec. |
| Power Consumption | : MAX 15VA |
| Trip Indication | : Backlight turns to orange |
| Controlling Range | : Target PF : 0.800 lag to 0.800 lead Switching Program : Automatic / Linear / Rotational |
| Relay Output | : Alarm mode : Over Voltage, Under Voltage, Over Compensate, Under Compensate, CT Polarity error, No Voltage, Step error, Over Temperature. |
| Temperature | : 0 to 100°C |
| Fan Output | : ON / OFF / Temp controlled |
| LCD Indication | : - Fault Occurs - Communication in Progress - Fan Mode DI - Digital Input |
| Environmental Conditions: | Outdoor use Temperature : Operating : 0°C to 60°C Storage : -20°C to 60°C Humidity : 0% to 95% without moisture consideration |
| Mounting | : Panel Mounting |
| Weight | : APFC148-312 : 460gms ; APFC148-308 : 450gms |

ORDER CODE INFORMATION

| PRODUCT | SUPPLY | CE | NO. OF STAGES |
|---------------------|------------------------|----|---------------|
| APFC148-312-90/550V | 90 to 550V AC, 50/60Hz | — | 12 / 14* |
| APFC148-308-90/550V | 90 to 550V AC, 50/60Hz | — | 8 |

NOTE : * When 14 relay option selected FAN & ALARM Relay will be used for control Switching (Applicable only for APFC148-312-90/550V)

SERIAL COMMUNICATION [Applicable only for APFC148-312]

| | |
|---------------------------------|--|
| Interface standard and protocol | RS485 AND MODBUS RTU |
| Communication address | 1 to 255 |
| Transmission Mode | Half duplex |
| Data types | Float and Integer |
| Transmission distance | 500 Meter maximum |
| Transmission speed | 300, 600, 1200, 2400, 4800, 9600, 19200 (in bps) |
| Parity | None, Odd, Even |
| Stop bits | 1 or 2 |

RESOLUTION

| PT Ratio x CT Ratio | kWh | PT Ratio x CT Ratio | kWh |
|---------------------|-------|---------------------|-------|
| <15 | 0.01K | <15000 | 0.01M |
| <150 | 0.1K | <150000 | 0.1M |
| <1500 | 1K | ≥150000 | 1M |

NOTE : 1) For Voltage, Current, Power, resolution is automatically adjusted.
2) For power factor, resolution is 0.001 & for temperature resolution is 0.1

ACCURACY

| Measurement | Accuracy | Measurement | Accuracy |
|---------------------------------|---------------------|-----------------|----------|
| Voltage V_{L-N} | ±0.5% of Full Scale | Active Power | 1% |
| Voltage V_{L-L} | ±0.5% of Full Scale | Apparent power | 1% |
| Current | ±0.5% of Full Scale | Reactive Power | 1% |
| Frequency | ±0.1% of Full Scale | Power factor | ±0.01 |
| For L-N > 20V, For L-L > 35V | | Active energy | Class 1 |
| Temperature | ±3°C of Full Scale | Apparent energy | Class 1 |
| | | Reactive energy | Class 1 |

SAFETY PRECAUTIONS

All safety related codification, symbols and instructions that appear in this operating manual or on the equipment must be strictly followed to ensure the safety of the operating personnel as well as the instrument.

If the equipment is not handled in a manner specified by the manufacturer, it might impair the protection provided by the equipment.

CAUTION : Read Complete instruction prior to installation and operation of the unit.

WARNING : Risk of electric shock.

WIRING GUIDELINES

- To prevent the risk of electric shock, power supply to the equipment must be kept OFF while doing the wiring arrangement. Do not touch the terminals while power is being supplied.
- Wiring shall be done strictly according to the terminal layout. Confirm that all connections are correct.
- Use pin type lugged terminals.
- To eliminate electromagnetic interference, use wires with adequate ratings and twists of the same in equal size shall be made.
- Cables used for connection to power source, must have a cross section of 1.5mm². These wires shall have current carrying capacity of 5A.

MAINTENANCE



- The equipment should be cleaned regularly to avoid blockage of ventilating Parts.
- Clean the equipment with a clean soft cloth. Do not use Isopropyl alcohol or any other cleaning agent.

INSTALLATION GUIDELINES
CAUTION

- This equipment, being built-in type, normally becomes a part of main control panel and in such case the terminals do not remain accessible to the user end after installation and internal wiring.
- Conductors must not come in contact with the internal circuitry of the equipment or else it may lead to a safety hazard that may in turn endanger life or cause electrical shock to the operator.
- Before disconnecting the secondary of the external current transformer from the equipment, make sure that the current transformer is short circuited to avoid risk of electrical shock and injury.
- The equipment shall not be installed in environmental condition other than those mentioned in this manual.
- Thermal dissipation of equipment is met through ventilation holes provided on chassis of equipment. Such ventilation holes shall not be obstructed else it can lead to a safety hazard.
- Connector screw must be tightened after installation.

MECHANICAL INSTALLATION / DIMENSIONS

- Prepare panel cut out with proper dimensions as shown in the figure.
- Push the meter into the panel cutout. Secure the meter in its place by pushing the clamp on the rear side. The screw of the panel clamp must be in the farthest forward slot.
- For proper sealing tighten the screw evenly with required torque.

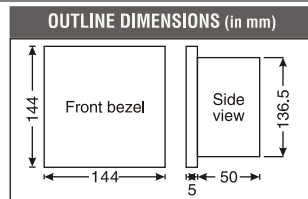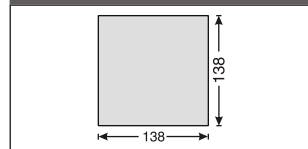
PANEL CUTOUT (in mm)

CAUTION

The equipment in its installed state must not come in close proximity to any heating sources, caustic vapors, oils, steam or other unwanted process by product.


EMC GUIDELINES

1. Use proper input power cables with shortest connections and twisted type.
2. Layout of connecting cables shall be away from any internal EMI source.


SENSOR CLIP ASSEMBLY

Assemble sensor on the panel /Din rail clamp by using center screw provision and M4 nut. As shown in below diagram.

1. PANEL MOUNTING ASSEMBLY :

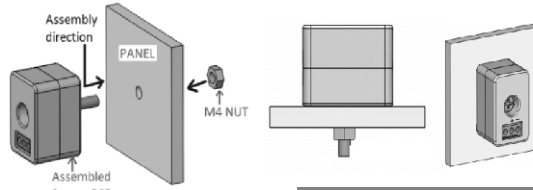

2. DIN RAIL MOUNTING ASSEMBLY :

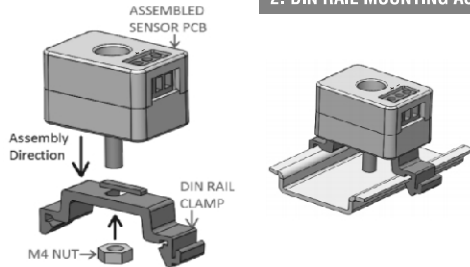







FRONT PANEL DESCRIPTION


SELEC

APFC148


KEY DESCRIPTION

| | |
|---|---|
| Press  &  | For 3 sec. to enter or exit from the configuration menu. |
| Press  | For increment |
| Press  | To move cursor right by one digit each time after last digit of display cursor shift at 1st digit of display. |
| Press  | To save the setting and move on to next page |
| Press  | To go back |

SERIAL NUMBER DESCRIPTION

Press ESC () key for 10sec. to display 8 digit serial number at 2nd & 3rd line of display.

AUTO / MANUAL / DEFAULT MODE DESCRIPTION

Press Enter () key for 3sec. to change online page mode.















CONFIGURATION

There are 4 dedicated keys , , , .













Use these 4 keys to enter into configuration menu / change setting.












NOTE : The setting should be done by a professional after going through this operating manual.












ONLINE PAGE DESCRIPTION

| KEY PRESS | PARAMETER KEY | DESCRIPTION For 3P4W |
|--|---|---|
| — | — | Displays line to neutral voltage of 3 phases. |
| |  | Displays line to line voltage of 3 phases. |
| |  | Displays % THD of line to neutral voltage of 3 phases. |
| |  | Displays % THD of line to line voltage of 3 phases. |
| |  | Displays current of 3 phases. |
| |  | Displays % THD of current of 3 phases. |
| Press  key (1st time) | — | Displays line to neutral avg. voltage, current & frequency. |
| |  | Displays line to line avg. voltage, current & frequency. |
| |  | Displays power factor of 3 phases. |
| Press  key (2nd time) | — | Displays active power of 3 phases. |
| |  | Displays reactive power of 3 phases. |
| Press  key (3rd time) | — | Displays apparent power of 3 phases. |
| | — | Displays active energy. |
| |  | Displays apparent energy. |
| |  | Displays reactive energy. |
| |  | Displays temperature. * |

NOTE : * Temperature will be displayed when over temp setting is 'ON'.

| KEY PRESS | PARAMETER KEY | DESCRIPTION For 3P3W |
|--|---|--|
| — | — | Displays line to line voltage of 3 phases. |
| |  | Displays % THD of line to line voltage of 3 phases. |
| |  | Displays current of 3 phases. |
| |  | Displays % THD of current of 3 phases. |
| Press  key (1st time) | — | Displays line to line avg. voltage, current & frequency. |
| |  | Displays avg. power factor of 3 phases. |
| Press  key (2nd time) | — | Displays total active power. |
| |  | Displays total reactive power. |
| |  | Displays total apparent power. |
| Press  key (3rd time) | — | Displays active energy. |
| |  | Displays apparent energy. |
| |  | Displays reactive energy. |
| |  | Displays temperature. * |

| KEY PRESS | PARAMETER KEY | DESCRIPTION For 1P2W |
|--|---|---|
| — | — | Displays line to neutral voltage of 1st phase. |
| |  | Displays % THD of line to neutral voltage of 1st phase. |
| |  | Displays current of 1st phase. |
| |  | Displays % THD of current of 1st phase. |
| Press  key (1st time) | — | Displays power factor of 1st phase & frequency. |
| Press  key (2nd time) | — | Displays active power of 1st phase. |
| |  | Displays reactive power of 1st phase. |
| Press  key (3rd time) |  | Displays apparent power of 1st phase. |
| | — | Displays active energy of 1st phase. |
| |  | Displays apparent energy of 1st phase. |
| |  | Displays reactive energy of 1st phase. |
| |  | Displays temperature. * |

| KEY PRESS | PARAMETER KEY | DESCRIPTION For 2P2W |
|--|---|---|
| — | — | Displays line to line voltage. |
| |  | Displays % THD of line to line voltage. |
| |  | Displays current. |
| |  | Displays % THD of current. |
| Press  key (1st time) | — | Displays power factor and frequency. |
| Press  key (2nd time) | — | Displays total active power. |
| |  | Displays total reactive power. |
| |  | Displays total apparent power. |
| Press  key (3rd time) | — | Displays active energy. |
| |  | Displays apparent energy. |
| |  | Displays reactive energy. |
| |  | Displays temperature. * |

BACKLIGHT INDICATIONS

| Backlight | DESCRIPTION |
|-----------|--|
| White | Capacitor Banks that are ON. |
| Orange | Fault condition occurred [Press ESC key to display trip parameter] Backlight turn to white again when user will press ESC key in fault condition. Trip parameters will be displayed for 3sec each. |


NOTE : On occurrence of any new fault condition backlight turns Orange & on pressing ESC key all trip parameters will be displayed for 3sec each.

CT ERROR

If current connection is reversed, meter will show in which phase connection is reversed. If more than one phase reverse, it will display combination of both.

- 1 - 1st phase
- 2 - 2nd phase
- 3 - 3rd phase

CONFIGURATION MENU

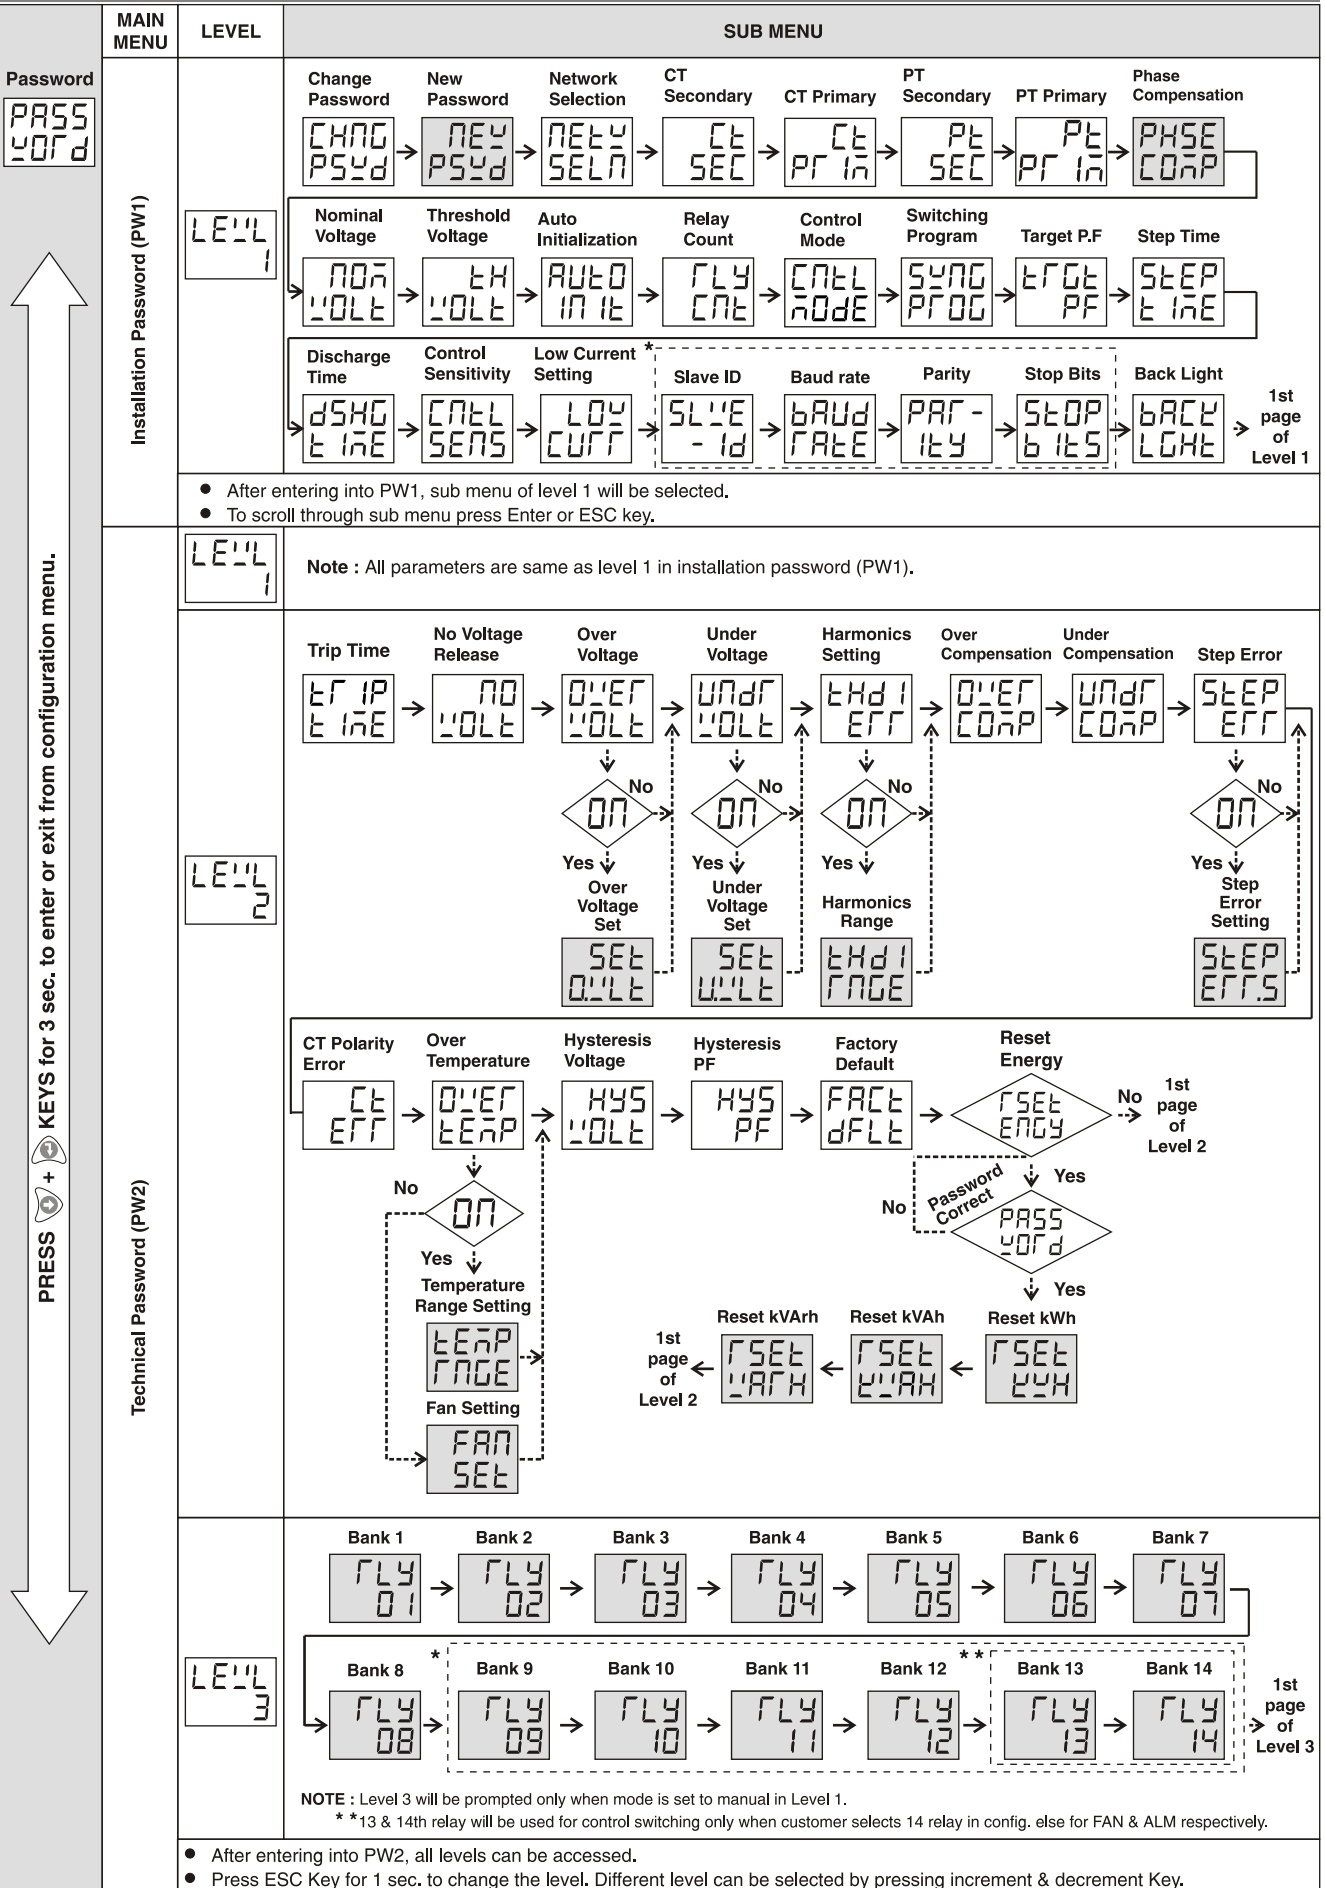

NOTE : * Applicable only for APFC148-312-90/550V.

Appearance of shaded menus dependent on selection of other parameters.

LEVEL 1

| Parameter | Display | Range | Default Value | Condition | Parameter | Display | Range | Default Value | Condition |
|--------------------------|-----------|---------------------------|--|-------------------------------------|------------------------------------|-----------|------------------------------------|---------------|---|
| Password | PASS WORD | 0000 – 9998 | 1000 (PW1) ; 2000 (PW2) | | Control Mode | CNTL MODE | Auto / Manual | Auto | Level 3 accessible only when control mode is manual |
| Change Password | CHNG PSWD | YES / NO | NO | | Switching Program | SWNG PROG | Auto / Linear / Rotational | Auto | |
| New Password | NEW PSWD | 0000 – 9998 | 0 | | Target Power Factor | TRGT PF | 0.800 to -0.800 | 1.000 | |
| Level Indication | LEVL | - | LEVEL 1 | | Step time | STEP TIME | 1 S to 999 S | 5 S | |
| Network Selection | NETW SELN | 3P4W / 3P3W / 1P2W / 2P2W | 3P4W | | Discharge Time (Reconnection time) | DSHG TIME | 1 S to 9999 S | 180 S | |
| CT Secondary | CT SEC | 1A / 5A | 5A | | Control Sensitivity settings | CNTL SENS | 55% to 100% | 60% | |
| CT Primary | CT PRIM | 1A / 5A-9999A | 5A | | Low Current | Low Curr | 0-50% | 0 | |
| PT Secondary | PT SEC | 100V – 500V | 350V | | * Slave ID | SLVE ID | 001 – 255 | 1 | |
| PT Primary | PT PRIM | 100V to 500KV | 350V | | * Baud Rate | BAUD RATE | 300/600/1200/2400/4800 / 9600/19K2 | 9600 | |
| Phase Compensation Angle | PHSE COMP | 0, 90, 120, 210, 240, 330 | 0 | Only Valid for 1P2W & 2P2W | * Parity | PAR-ITY | NONE / ODD / EVEN | NONE | |
| Nominal Voltage | NOM VOLT | 50 – 550V | For 1P2W/3P4W-240V For 3P3W/2P2W-415V | | * Stop Bits | STOP BITS | 1 or 2 | 1 | |
| Threshold Voltage | TH VOLT | 0 – 100% | 0% | | Backlight | BACK LGHT | 0 to 7200 Sec | 0 | |
| Auto Initialization | AUTO INIT | YES / NO | YES | | | | | | |
| Relays Count | RLY CNT | 1 – 8 / 12 / 14 | 08 or 12 | APFC148-308-8RL APFC148-312-12RL | | | | | |

LEVEL 2

| Name of Parameter | Nomenclature | Range | Default Value | Refer only if trip time setting is ON else all tripping are instantaneous. | | Action to be taken by APFC |
|---------------------------|--------------|-----------------------------------|-------------------------|--|------------|--|
| | | | | Activate | Deactivate | |
| Trip time setting | TRIP TIME | ON / OFF | OFF | | | |
| No Voltage Release | NO VOLT | ON / OFF | OFF | When any phase is missing | | Disconnect All steps |
| Over Voltage | OVER VOLT | ON / OFF | ON | | | |
| Over Voltage setting | SET O.VLT | 50 - 300V (L-N) 85 - 520 (L-L) | 260V (L-N) 460 (L-L) | 5min | 1min | (For Nominal Voltage) |
| Under Voltage | UNDR VOLT | ON / OFF | OFF | | | |
| Under Voltage setting | SET U.VLT | 50 - 300V (L-N) 85 - 520 (L-L) | 190V (L-N) 340 (L-L) | Inst | Inst | Disconnect All steps |
| Total Harmonic Distortion | THDI ERR | ON / OFF | OFF | 5min | 2.5min | Disconnect All steps |
| THD I Range | THDI RNGE | 20 - 100% | 50% | | | |
| Over Compensate | OVER COMP | ON / OFF | ON | 5min | 1min | |
| Under Compensate | UNDR COMP | ON / OFF | ON | 5min | 1min | |
| Step Error | STEP ERR | ON / OFF | ON | NA | NA | |
| Step Error Setting | STEP ERR.S | 20 to 80% | 20 | | | All capacitor banks are blocked |
| CT Polarity error | CT ERR | ON / OFF | ON | Inst | Inst | |
| Over Temperature | OVER TEMP | ON / OFF | OFF | | | |
| Over Temperature Setting | TEMP RNGE | 0-100 | 65 C | 5min | 2.5min | FAN ON |
| Fan Setting | FAN SET | ON / OFF | OFF | | | Prompted only if over TEMP is off |
| Hysteresis voltage | HYS VOLT | 1 to 10% | 2 | | | |
| Hysteresis PF | HYS PF | 1 to 5% | 1 | | | |
| Factory Default | FACT DFLT | YES / NO | NO | | | |
| Reset Energy | RSET ENGY | YES / NO | NO | | | |
| • Reset Energy Pass word | RSET ENGY | 0001 – 9999 | 2001 | | | Only Valid if customer wants to reset energy |
| Reset kWh | RSET kWh | YES / NO | NO | | | |
| Reset kVAh | RSET kVAh | YES / NO | NO | | | |
| Reset kVArh | RSET VArh | YES / NO | NO | | | |

• For resetting energy parameters user will be prompted the password. This password will be value which will be greater than the technical password by 1.

LEVEL 3

| Name of Parameter | Nomenclature | Range | Default Value | Condition | Name of Parameter | Nomenclature | Range | Default Value | Condition |
|-------------------|--------------|----------|---------------|---|-------------------|--------------|----------|---------------|---|
| Relay 1 | RLY1 | ON / OFF | OFF | Prompted only if mode is set to manual. | Relay 8 | RLY8 | ON / OFF | OFF | Prompted only if mode is set to manual. |
| Relay 2 | RLY2 | ON / OFF | OFF | | * Relay 9 | RLY9 | ON / OFF | OFF | |
| Relay 3 | RLY3 | ON / OFF | OFF | | * Relay 10 | RLY10 | ON / OFF | OFF | |
| Relay 4 | RLY4 | ON / OFF | OFF | | * Relay 11 | RLY11 | ON / OFF | OFF | |
| Relay 5 | RLY5 | ON / OFF | OFF | | * Relay 12 | RLY12 | ON / OFF | OFF | |
| Relay 6 | RLY6 | ON / OFF | OFF | | * * Relay 13 | RLY13 | ON / OFF | OFF | |
| Relay 7 | RLY7 | ON / OFF | OFF | | * * Relay 14 | RLY14 | ON / OFF | OFF | |

* Applicable only for APFC148-312-90/550V ; * * 13 & 14th relay will be used for control switching only when customer selects 14 relay in config. else for FAN & ALM respectively.

FAN SETTINGS

| SETTING | DESCRIPTION |
|--|---|
| None | Fan output permanently off. |
| Fixed On | Fan output permanently on. |
| Temperature ON/OFF (Setting range = 0°C - 100°C) | Fan output will turn on when the temperature exceed user set value. |

NOTE :

- A.INT will be update to 'NO' automatically in configure after auto initialization completion.
- Reauto - Initialization will be done by only changing A.INT - Yes in configure manually.
- If DI is high controller work in manual mode & if Low return to 'Auto' mode.

MODBUS REGISTER ADDRESSES LIST [Applicable only for APFC148-312]

Readable parameters: [For Measuring: Length (Register) : 2; Data structure : Float, For Error: Length (Register) : 1; Data structure: Integer]

| Address | Hex Address | Parameter | Address | Hex Address | Parameter |
|---------|-------------|--------------------|---|-------------|---------------------------|
| 30000 | 0x00 | Voltage V1N | 30046 | 0x2E | Total kVA |
| 30002 | 0x02 | Voltage V2N | 30048 | 0x30 | PF1 |
| 30004 | 0x04 | Voltage V3N | 30050 | 0x32 | PF2 |
| 30006 | 0x06 | Average Voltage LN | 30052 | 0x34 | PF3 |
| 30008 | 0x08 | Voltage V12 | 30054 | 0x36 | Average PF |
| 30010 | 0x0A | Voltage V23 | 30056 | 0x38 | Frequency |
| 30012 | 0x0C | Voltage V31 | 30058 | 0x3A | kWh |
| 30014 | 0x0E | Average Voltage LL | 30060 | 0x3C | kVAh |
| 30016 | 0x10 | Current I1 | 30062 | 0x3E | kVArh |
| 30018 | 0x12 | Current I2 | 30064 | 0x40 | Temperature |
| 30020 | 0x14 | Current I3 | 30066 | 0x42 | No Voltage Error |
| 30022 | 0x16 | Average Current | 30067 | 0x43 | Under Voltage Error |
| 30024 | 0x18 | kW1 | 30068 | 0x44 | Over Voltage Error |
| 30026 | 0x1A | kW2 | 30069 | 0x45 | THD I Error |
| 30028 | 0x1C | kW3 | 30070 | 0x46 | Temperature Error |
| 30030 | 0x1E | kVA1 | 30071 | 0x47 | Over compensate Error |
| 30032 | 0x20 | kVA2 | 30072 | 0x48 | Under compensate Error |
| 30034 | 0x22 | kVA3 | 30073 | 0x49 | CT Error |
| 30036 | 0x24 | kVAr1 | Note : For Error 0 :No Error ; 1 :Error Present | | |
| 30038 | 0x26 | kVAr2 | 30074-30087 | 0x4A-0x57 | Relay1-Relay12/14* Status |
| 30040 | 0x28 | kVAr3 | 30088 | 0x58 | Digital Input Status |
| 30042 | 0x2A | Total kW | Note: For Status 0:OFF;1:ON | | |
| 30044 | 0x2C | Total kVA | | | |

| Address | Hex Address | Parameter |
|--------------------------------|-------------|---------------------------|
| 30090-30116 | 0x5A-0x74 | Bank1 - Bank 12/14* Value |
| Total Harmonic Distortion(THD) | | |
| 30124 | 0x7C | THD of Voltage V1N |
| 30126 | 0x7E | THD of Voltage V2N |
| 30128 | 0x80 | THD of Voltage V3N |
| 30130 | 0x82 | THD of Voltage V12 |
| 30132 | 0x84 | THD of Voltage V23 |
| 30134 | 0x86 | THD of Voltage V31 |
| 30136 | 0x88 | THD of Current I1 |
| 30138 | 0x8A | THD of Current I2 |
| 30140 | 0x8C | THD of Current I3 |
| 30684 | 0x2AC | Serial number in HEX |

| Address | Hex Address | Parameter |
|-------------|-------------|-----------------------|
| 00000-00013 | 0x00-0x0D | Relay1 - Relay 12/14* |

| Address | Hex Address | Parameter |
|-------------|-------------|-----------------------|
| 00000-00013 | 0x00-0x0D | Relay1 - Relay 12/14* |

| Constant Parameter | Meaning |
|--------------------|-------------|
| 0 | Voltage V1N |
| 1 | Voltage V2N |
| 2 | Voltage V3N |
| 3 | Voltage V12 |
| 4 | Voltage V23 |
| 5 | Voltage V31 |
| 6 | Current I1 |
| 7 | Current I2 |
| 8 | Current I3 |

Readable / writable parameters :

| Address | Hex Address | Parameter | Range | Length (Register) | Data Structure |
|---------|-------------|------------------------------------|---|-------------------|--|
| 40000 | 0x00 | Password-1 | Min value:0 Max value : 9998 | 1 | Integer |
| | | | Value Meaning | | |
| 40001 | 0x01 | N/W selection | 0 1 2 3 | 1 1 1 1 | Integer Integer Integer Integer |
| | | | Min value Max value | | |
| 40002 | 0x02 | CT Secondary (A) | 1 5 | 1 | Integer |
| 40003 | 0x03 | CT primary (A) (CT Secondary=5) | 5 5 - 9999 | 1 | Integer |
| | | CT primary (A) (CT Secondary=1) | 1 1 - 9999 | | |
| 40004 | 0x04 | PT Secondary (V) | 100 500 | 1 | Integer |
| 40005 | 0x05 | PT primary (V) | 100 500000 | 2 | Integer |
| 40007 | 0x07 | Slave id | 1 255 | 1 | Integer |
| | | | Value Meaning | | |
| 40008 | 0x08 | Baud rate (bps) | 0x0000 300 0x0001 600 0x0002 1200 0x0003 2400 0x0004 4800 0x0005 9600 0x0006 19200 | 1 | Integer |
| 40009 | 0x09 | Parity | 0x0000 None 0x0001 Odd 0x0002 Even | 1 | Integer |
| 40010 | 0x0A | Stop bit | 0x0000 1 0x0001 2 | 1 | Integer |
| 40011 | 0x0B | Backlight OFF(Sec.) | 0 7200 | 1 | Integer |
| 40012 | 0x0C | Factory Default | 1 Set to factory setting range | 1 | Integer |
| 40013 | 0x0D | Reset kWh | 1 Reset Total Active Energy | 1 | Integer |
| 40014 | 0x0E | Reset kVAh | 1 Reset Total Apparent Energy | 1 | Integer |
| 40015 | 0x0F | Reset kVArh | 1 Reset Total Reactive Energy | 1 | Integer |
| | | | Min value Max value | | |
| 40016 | 0x10 | Password-2 | 0 9998 | 1 | Integer |
| 40017 | 0x11 | Phase Compensation (°) | 0-0, 1-90, 2-120, 3-210, 4-240, 5-330 | 1 | Integer |





| Address | Hex Address | Parameter | Range | Length (Register) | Data Structure |
|-------------|-------------|---------------------------|--------------------------------------|-------------------|----------------|
| 40018 | 0x12 | Nominal Voltage(V) | 50 50 - 550 | 1 | Integer |
| 40019 | 0x13 | Threshold Voltage (%) | 0 0 - 100 | 1 | Integer |
| 40020 | 0x14 | Auto Initialization | 0 : NO ; 1 : YES | 1 | Integer |
| 40021 | 0x15 | Relay Count | 1 12 / 14* | 1 | Integer |
| 40022 | 0x16 | Control Mode | 0 - MANUAL ; 1 - AUTO | 1 | Integer |
| 40023 | 0x17 | Switching Program | 0 - Auto ; 1 - Rotation ; 2 - Linear | 1 | Integer |
| 40024 | 0x18 | Target Power Factor (PF) | 800 -800 | 1 | Signed Integer |
| 40025 | 0x19 | Step time (Sec.) | 1 1-999 | 1 | Integer |
| 40026 | 0x1A | Discharge Time(Sec.) | 1 1-9999 | 1 | Integer |
| 40027 | 0x1B | Control Sensitivity(%) | 55 55 - 100 | 1 | Integer |
| 40028 | 0x1C | No Voltage | 0 : OFF ; 1 : ON | 1 | Integer |
| 40029 | 0x1D | Over Voltage | 0 : OFF ; 1 : ON | 1 | Integer |
| 40030 | 0x1E | Set Over Voltage(V) | 50-300 (LN) ; 85-520(LL) | 1 | Integer |
| 40031 | 0x1F | Under Voltage | 0 : OFF ; 1 : ON | 1 | Integer |
| 40032 | 0x20 | Set Under Voltage(V) | 50-300(LN) ; 85-520(LL) | 1 | Integer |
| 40033 | 0x21 | THDI | 0 : OFF ; 1 : ON | 1 | Integer |
| 40034 | 0x22 | THDI Range(%) | 20 20 - 100 | 1 | Integer |
| 40035 | 0x23 | Over Compensation | 0 : OFF ; 1 : ON | 1 | Integer |
| 40036 | 0x24 | Under Compensation | 0 : OFF ; 1 : ON | 1 | Integer |
| 40037 | 0x25 | Step Error | 0 : OFF ; 1 : ON | 1 | Integer |
| 40038 | 0x26 | Set Step Error(%) | 20 20 - 80 | 1 | Integer |
| 40039 | 0x27 | CT Polarity error | 0 : OFF ; 1 : ON | 1 | Integer |
| 40040 | 0x28 | Over Temperature | 0 : OFF ; 1 : ON | 1 | Integer |
| 40041 | 0x29 | Set Over Temperature (°C) | 0 0 - 100 | 1 | Integer |
| 40042 | 0x2A | Fan Settings | 0 : OFF ; 1 : ON | 1 | Integer |
| 40043 | 0x2B | Hysteresis Voltage (%) | 1 1 - 10 | 1 | Integer |
| 40044 | 0x2C | Hysteresis PF(%) | 1 1 - 5 | 1 | Integer |
| 40045-40058 | 0x2D-0x3A | Relay1-Relay14 | 0:OFF;1:ON | 1 | Integer |
| 40059 | 0x3B | Trip time setting | 0 : OFF ; 1 : ON | 1 | Integer |
| 40060 | 0x3C | Low Current setting(%) | 0 0-50 | 1 | Integer |

* 13 & 14th relay will be used for control switching only when customer selects 14 relay in config. else for FAN & ALM respectively.

USER GUIDE

- a) **Manual switching (MANL)** : 1) When this switching program is selected, the capacitor steps are controlled manually by the user.
 2) **DI** : When user selects manual switching through Auto / Manual switch on the panel, then all the relays that are 'ON' through APFC are turned 'OFF' and then user can manually turn every capacitor bank through push button available on panel for respective banks. In this case APFC has no more control and it switches off all bank that it was earlier controlling.
- b) **Rotational switching (ROTN)** : This switching program is based on rotational first-in-first-out sequence. This option will automatically switch in and out the capacitors according to the targeted power factor, sensitivity setting and the re-connection time setting.
- c) **Automatic switching (AUTO)** : This automatic switching program uses intelligent switching sequence. The step switching sequence is not fixed and the program automatically selects the most appropriate steps to switch in or out in order to achieve shortest reaction time with minimum number of steps.
- d) **Linear switching (LINR)** : In this switching sequence it works in last in first out mode. This option will automatically switch in and out the capacitors according to the targeted power factor, sensitivity setting and the re-connection time setting.

WIRING DIAGRAM

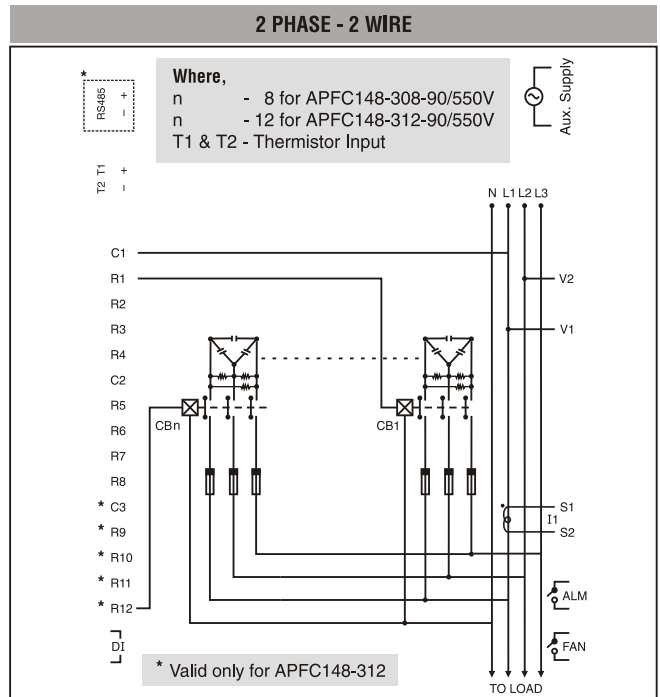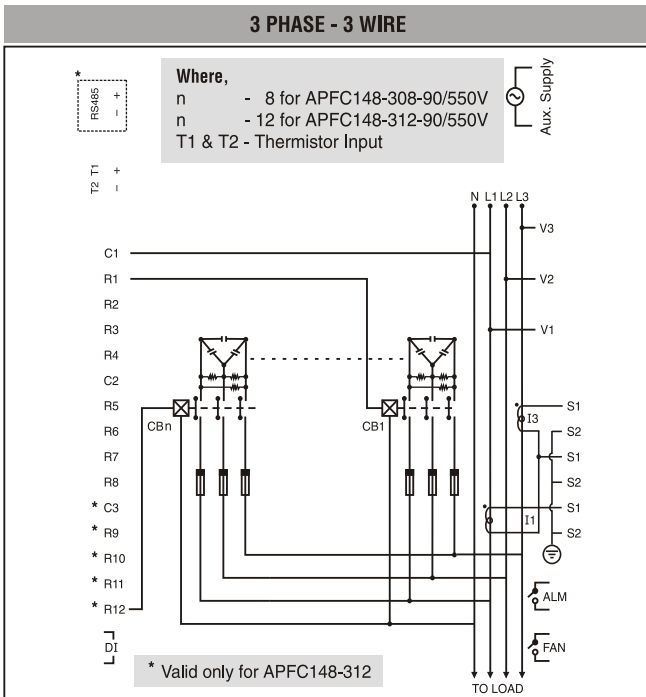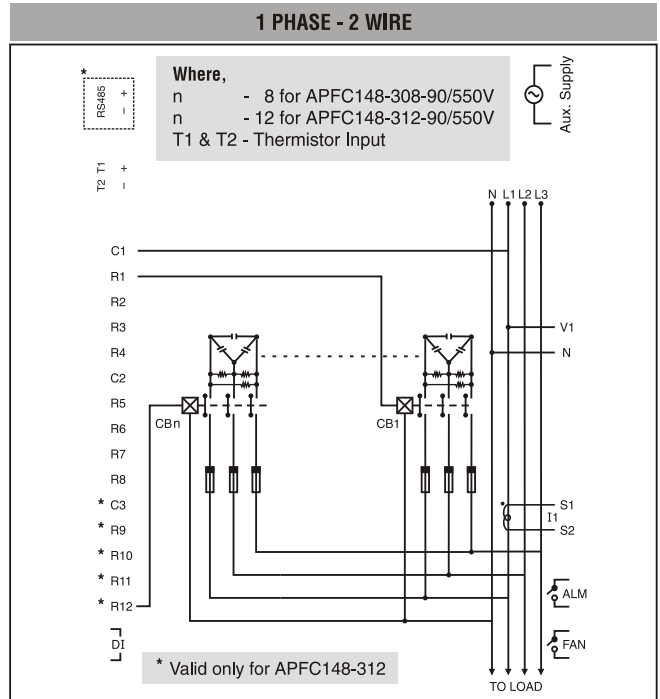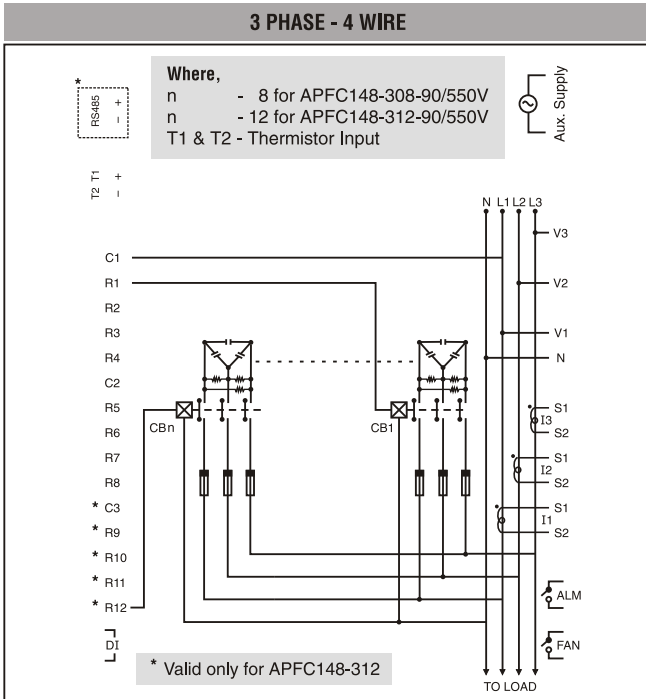

NOTE : ● For N/W selection 2P2W voltage (V_{L-L}) applied between V1 & V2 and connect CT for I1 [Do not use V3, N I2 & I3 terminal]
 ● For N/W selection 1P2W voltage (V_{L-N}) applied between V1 & N and connect CT for I1 [Do not use V2, V3, I2 & I3 terminal]

PHASE-ANGLE SETTING

| Voltage | L1-N | L2-N | L3-N | L1-N | L2-N | L3-N | L1-N | L2-N | L3-N |
|-------------|------|------|------|------|------|------|------|------|------|
| CT | L1 | L2 | L3 | L2 | L3 | L1 | L3 | L1 | L2 |
| Phase-Angle | 0° | 0° | 0° | 240° | 240° | 240° | 120° | 120° | 120° |

| Voltage | L2-L3 | L3-L1 | L1-L2 | L2-L3 | L3-L1 | L1-L2 | L2-L3 | L3-L1 | L1-L2 |
|-------------|-------|-------|-------|-------|-------|-------|-------|-------|-------|
| CT | L1 | L2 | L3 | L2 | L3 | L1 | L3 | L1 | L2 |
| Phase-Angle | 90° | 90° | 90° | 330° | 330° | 330° | 210° | 210° | 210° |

(Specifications are subject to change, since development is a continuous process.)

Selec Controls Pvt. Ltd., India

Factory Address :
 EL-27/1, Electronic Zone, TTC Industrial Area,
 MIDC, Mahape, Navi Mumbai - 400 710, INDIA.
 Tel. No. : +91-22-41 418 419/430 | Fax No. : +91-22-28471733
 Toll free : 1800 227 353 (BSNL/MTNL Subscribers only)
 Website : www.selec.com | Email : sales@selec.com