

**selec**

**XC22B V2**  
Operating Instructions



72 x 72mm

**SPECIFICATIONS**

<b>DISPLAY</b>	4 digit,0.56" Height,Red 7 segment LED.
<b>SUPPLY</b>	90 to 270V AC/DC , AC: 50 or 60 Hz.
<b>INPUT FREQUENCY</b>	<b>Slow Speed:</b> 30Hz. <b>High Speed:</b> 5kHz.
<b>TEMPERATURE</b>	<b>Operating:</b> 0 to 50°C <b>Storage:</b> -5 to 55° C.
<b>RESET</b>	1)Front panel reset. 2)Remote Reset. 3)Auto Reset.
<b>DELAY MODES</b>	On delay / Interval.
<b>SENSOR SUPPLY</b>	12VDC, 30mA (±10%).
<b>COUNT INPUT</b>	5 to 30VDC from Proximity Switches, Encoders, Solid state devices, Mechanical switch ,Potential free contacts
<b>RETENTION</b>	User selectable (DIP SW)
<b>LED INDICATION</b>	Relay status.
<b>OUTPUT</b>	2 Relay (SPDT)
<b>RELAY RATING</b>	5A@ 250VAC / 28VDC.
<b>MOUNTING</b>	Panel mounting.
<b>HUMIDITY</b>	95% RH.
<b>WEIGHT</b>	210 gms.

**SAFETY PRECAUTIONS**

Please maintain these instructions and review them prior to using the unit:

**⚠ Warning:**


1. This unit is panel mounted type with its output terminals getting connected to the host equipment. Such equipment shall also comply with basic EMI/EMC and safety requirements like BS EN 61326-1 and BS EN 61010 respectively.
2. To avoid electric shock, power supply of the unit should be kept off while wiring. Wiring should be done strictly as per the terminal layout, given in the manual.
3. Use lugged terminals to meet M3 screws.

**⚠ Caution:**

1. This unit is not intended for outdoor use.
2. The power connection cable must have a cross-section of atleast 1mm<sup>2</sup> and insulation capacity of atleast 1.5kV.
- 3.The output connections must not be loaded beyond the specified values/range.
4. Avoid inflow of dust and contact of conductive material with the internal circuitry of the unit.
5. The unit must not operate in presence of heating sources, caustic vapors, oil, steam, vibration or impact etc.
6. Use clean soft cloth for cleaning. Do not use any organic solvents like Isopropyl alcohol.Care must be taken to avoid entry of water into the circuitry through the ventilation holes.


**MECHANICAL INSTALLATION**

**OVERALL DIMENSIONS** (All dimensions in mm)

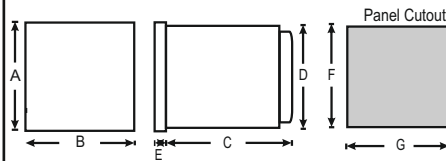

	A	B	C	D	E	F	G
<b>DIMENSION</b>	72	72	115	68	10	69	69


**TERMINAL CONNECTIONS**

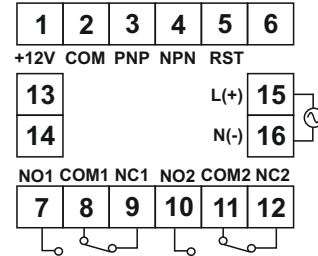


Terminals	Description
1	+12V (Sensor Supply)
2	COM
3	CNT Input for PNP
4	CNT Input for NPN
5	RESET
7-8-9	NO-COM-NC of Relay 1
10-11-12	NO-COM-NC of Relay 2
15	Live (+)
16	Neutral (-)

**LOAD CONNECTIONS**

For load current < than 0.5A

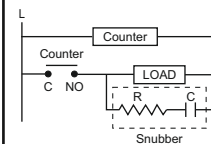

For higher loads use interposing relay / contactor

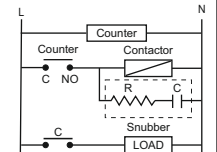

**NOTE :** a)Use snubber as shown above to increase life of internal relay  
b)Use separate shielded wires for inputs.

## DIP SWITCH SETTING

**NOTE :** DIP switch for Auto Reset and Mode settings is on the side of the Instrument.

STATE DIP SW	OFF	ON
SW1	ON Delay	Interval
SW2	Non Auto Reset	Auto Reset
SW3	Non Over Run	Over Run
SW7	Retention OFF	Retention ON
SW8	Fast Speed	Slow Speed

## DIP SWITCH SETTINGS FOR AUTO RESET

RESET	SW4	SW5	SW6
Immediate	OFF	OFF	OFF
1 sec	ON	OFF	OFF
2 sec	OFF	ON	OFF
3 sec	ON	ON	OFF
4 sec	OFF	OFF	ON
5 sec	ON	OFF	ON
6 sec	OFF	ON	ON
7 sec	ON	ON	ON

**NOTE :** Auto Reset Setting is applicable only when DIP SW2 is ON.

## DIP SWITCH SETTING EXAMPLE




DIP SW	FUNCTION SETTING
1	Interval
2	Auto Reset
3	Non Over Run
4 , 5 , 6	Auto Reset Time=1sec
7	Retention ON
8	Slow Speed

## WIRING DIAGRAM FOR COUNT INPUT


**(Sensor color codes :-**

Red = +12V, Green = CNT, Black = GND  
Brown = +12V, Black = CNT, Blue = GND)


### External Wiring Diagram for PNP Sensor

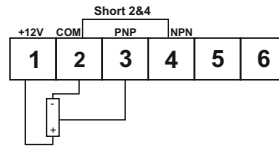

### External Wiring Diagram for NPN Sensor

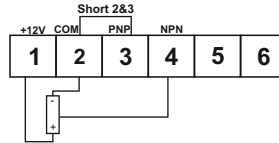

### External Wiring Diagram for Potential Free Count

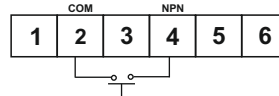

(Specifications subject to change as development is a continuous process).

## Selec Controls Pvt. Ltd., India.

(Formerly Selectron Process Controls Pvt. Ltd.)

Tel:91-22-28476443/1882, Fax:91-22-28471733,

Toll free: 1800 227 353, Web.: www.selec.com

E- mail: sales@selec.com.